

Remote Control Center instruction manual for iOS

INDEX

| | |
|--------------------------------|---|
| System Requirement | 1 |
| iTunes Download Link..... | 1 |
| System Setting..... | 1 |
| Home Screen | 2 |
| Add Client | 2 |
| Modify Client | 3 |
| Modify Host..... | 4 |
| Select Channel of Client | 5 |
| Delete Client | 6 |

Remote Control Center instruction manual for iOS

System Requirement

APP name: Remote Control Center



iOS version 7.0 or later

Size: 2.2M

iTunes Download Link

<https://itunes.apple.com/us/app/remote-control-center/id929873260?l=zh&ls=1&mt=8>

iTunes Download QR code



System Setting

Before setting, you have to connect Host / Client / Ethernet Switch / Access Point (Wi-Fi router) together.

Mobile phone connect to the Wi-Fi and set the IP address same with the Host / Client.

System default IP setting is Auto IP, it will assign 169.254.X.X (subnet mask 255.255.0.0) to transmitters and receivers, you could also set to DHCP or Static IP, please refer to user manual web setting chapter: IP Setup.

There are three ways to get the IP address of receiver:

1. Local IP shows on right bottom screen when booting.
2. Press remote control button[MENU] [1] [ENTER](IP Address)

Remote Control Center instruction manual for iOS

Home Screen



When first time enter the APP will see above home (Client) screen

Top left 「+」 to add client

Top right 「Edit」 to delete client

Bottom left 「Host」 to enter host setting page

Bottom right 「Info」 to enter Information page


Add Client



Enter the device Name you prefer and IP address

Notice: Name and IP should be unique, not allow duplicate


Touch 「Add Device」 button to finish setting.

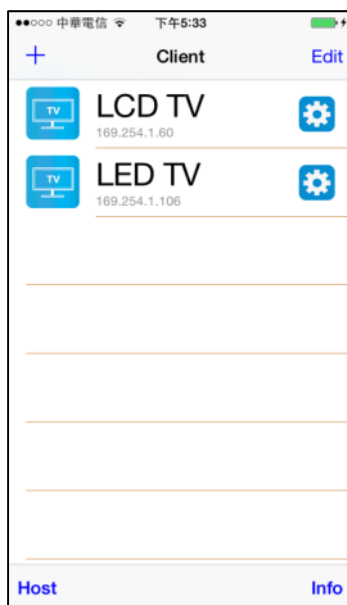


Return to home screen will see the device which just add

Remote Control Center instruction manual for iOS

Modify Client

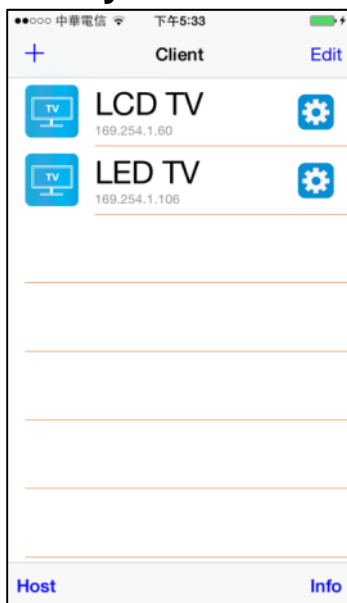

Touch the gear icon of client to modify settings

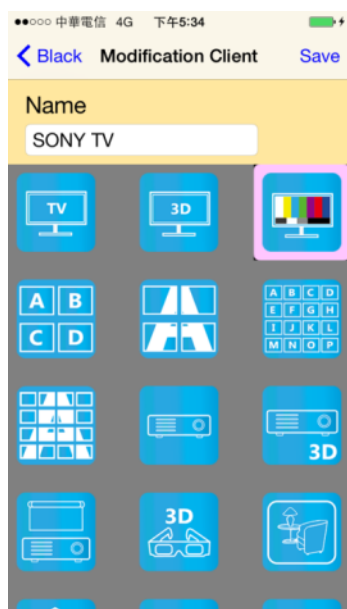


Touch Name column to change name

Touch icon to select different icon

Touch top right 「Save」 to finish setting


Notice: IP address is not able to modify, please delete the client and add a new one if input wrong IP address

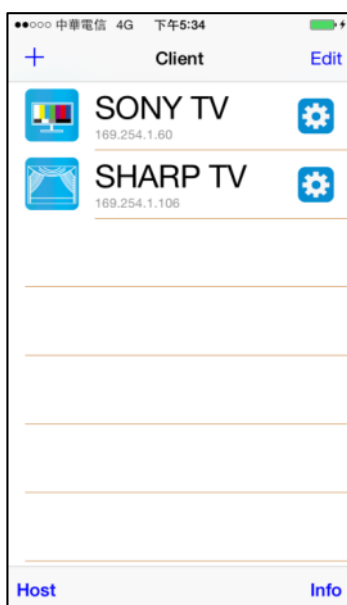

Return to home screen will see the device which just changed

Remote Control Center instruction manual for iOS

Modify Host

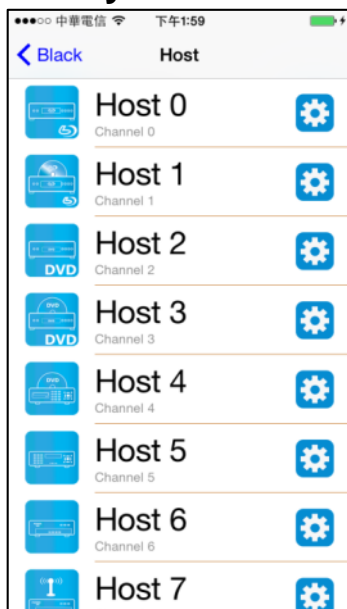

Touch bottom left 「Host」 to enter host setting page


Touch the gear icon of host to modify settings



Touch Name column to change name

Touch icon to select different icon


Touch top right 「Save」 to finish setting

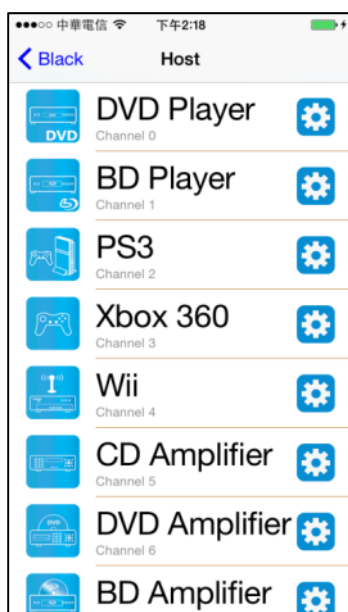


Return to host page will see the device which just changed

Remote Control Center instruction manual for iOS

Select Channel of Client

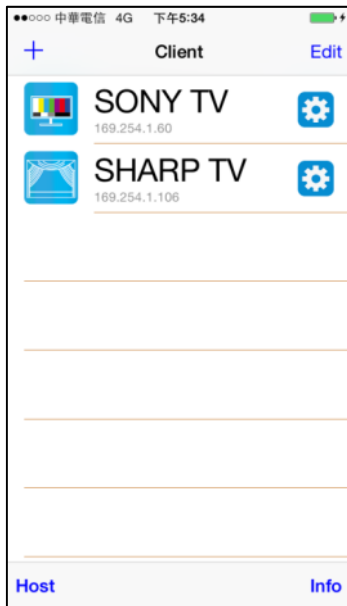

Touch client name to enter channel selection page

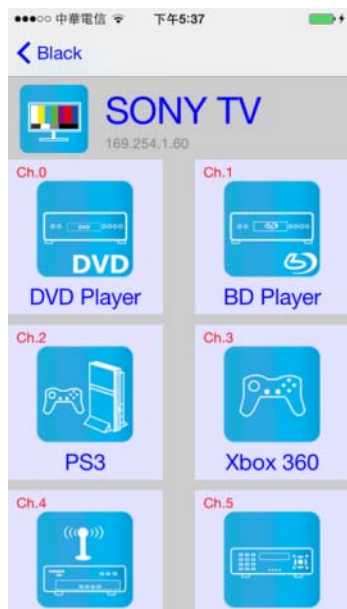


Notice: it will show all 16 channels even does not exist




The selected channel will be high light and switch the screen immediately
Notice: it will switch to the channel even does not exist(just like a remote control)

Remote Control Center instruction manual for iOS


Delete Client

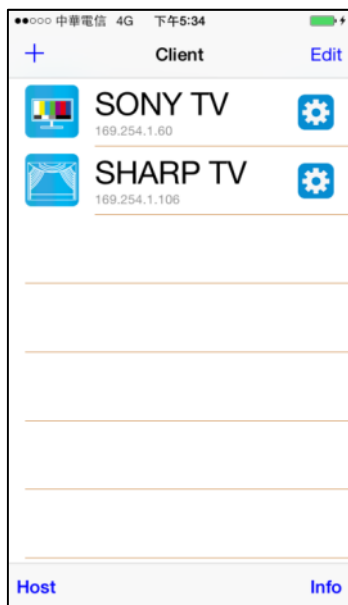

Touch top right 「Edit」 to show 「-」 icon

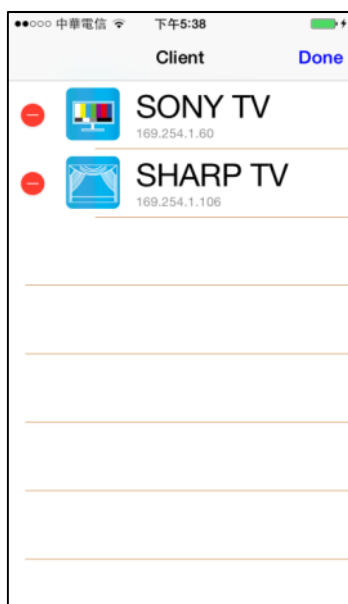

Touch 「-」 icon to show 「Delete」 icon

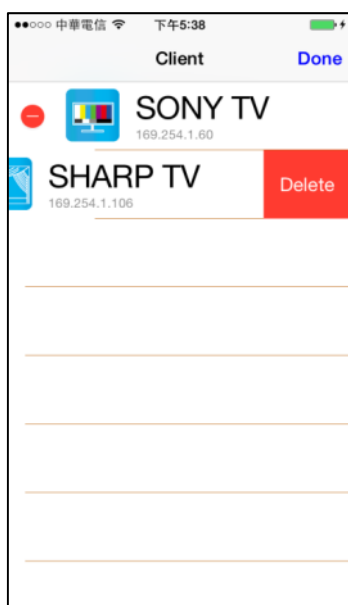

Touch 「Delete」 icon to delete
Touch top right 「Done」 to exit