

MT0404-VL1 RS232 and Telnet Commands in ASCII		
No.	Comand	Action
1	?	Print Help Information
2	HELP	Print Help Information
3	STATUS	Print System Status And Port Status
4	PON	Power On, System Run On Normal State
5	POFF	Power Off, System Run On Power Save State
6	IR ON/OFF	Set System IR Control On Or Off
7	KEY ON/OFF	Set System KEY Control On Or Off
8	APM ON/OFF	Set Advanced Process Mode On Or Off
9	BEEP ON/OFF	Set Onboard Beep On Or Off
10	RESET	Reset System To Default Setting, (Should Type 'Yes' To Confirm, 'No' To Discard)
11	OUT 01 ON/OFF	Set OUTPUT 1 ON or OFF
12	OUT 02 ON/OFF	Set OUTPUT 2 ON or OFF
13	OUT 03 ON/OFF	Set OUTPUT 3 ON or OFF
14	OUT 04 ON/OFF	Set OUTPUT 4 ON or OFF
15	OUT 01 FR 01	OUTPUT 1 from INPUT 1
16	OUT 01 FR 02	OUTPUT 1 from INPUT 2
17	OUT 01 FR 03	OUTPUT 1 from INPUT 3
18	OUT 01 FR 04	OUTPUT 1 from INPUT 4
19	OUT 02 FR 01	OUTPUT 2 from INPUT 1
20	OUT 02 FR 02	OUTPUT 2 from INPUT 2
21	OUT 02 FR 03	OUTPUT 2 from INPUT 3
22	OUT 02 FR 04	OUTPUT 2 from INPUT 4
23	OUT 03 FR 01	OUTPUT 3 from INPUT 1
24	OUT 03 FR 02	OUTPUT 3 from INPUT 2
25	OUT 03 FR 03	OUTPUT 3 from INPUT 3
26	OUT 03 FR 04	OUTPUT 3 from INPUT 4
27	OUT 04 FR 01	OUTPUT 4 from INPUT 1
28	OUT 04 FR 02	OUTPUT 4 from INPUT 2
29	OUT 04 FR 03	OUTPUT 4 from INPUT 3
30	OUT 04 FR 04	OUTPUT 4 from INPUT 4
31	OUT 00 FR 01	ALL from INPUT 1
32	OUT 00 FR 02	ALL from INPUT 2
33	OUT 00 FR 03	ALL from INPUT 3
34	OUT 00 FR 04	ALL from INPUT 4

Note: Any commands will not be executed unless followed by a carriage return. Commnads are not case-sensitive