



The IP Address for H-HDMI-RF-PETIT is

**192.168.1.10**


**Username: user**

**Password: user**


The PC NIC Ethernet card IP Address needs to be set up on the same subnet as our modulator 192.168.1.xx ,The xx could be set between 1 and 254, but not 10 because Duplicate IP is not allowed on the network

## Network Setup :

### 1) Go to "Windows Start"

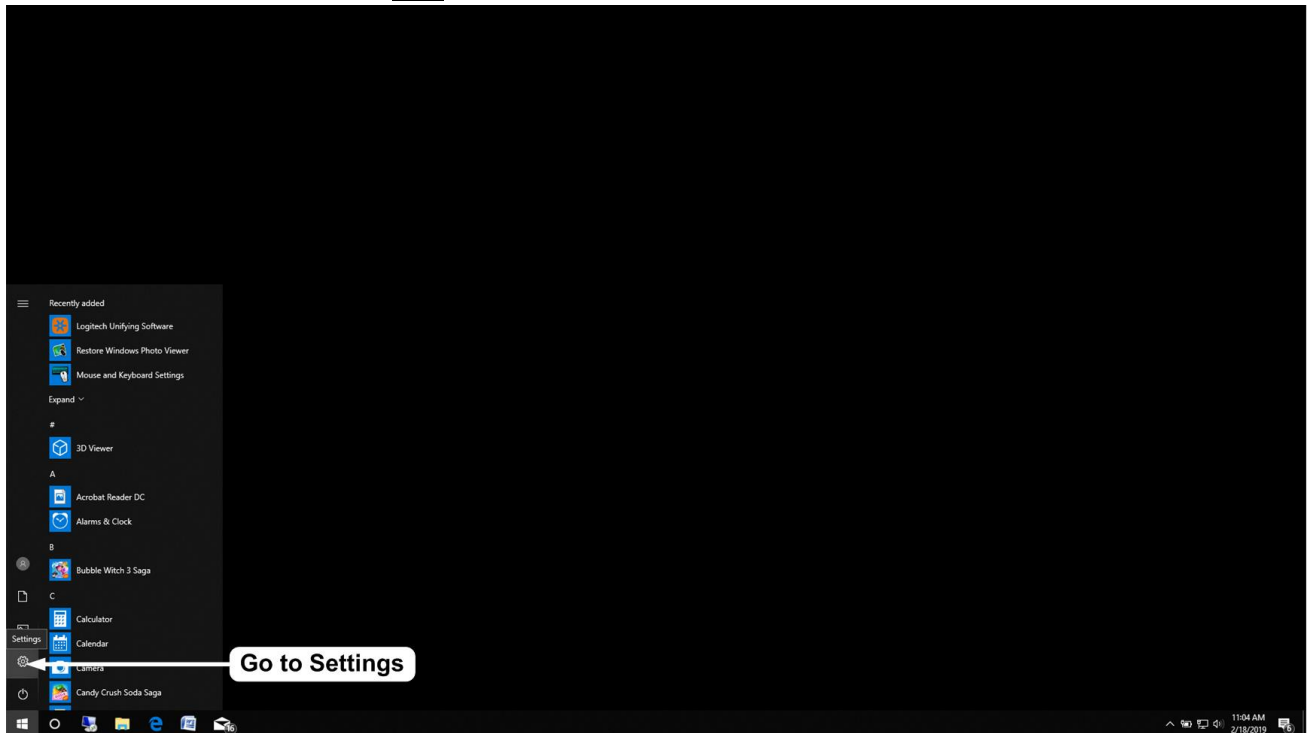


### 2) Go to Windows Settings

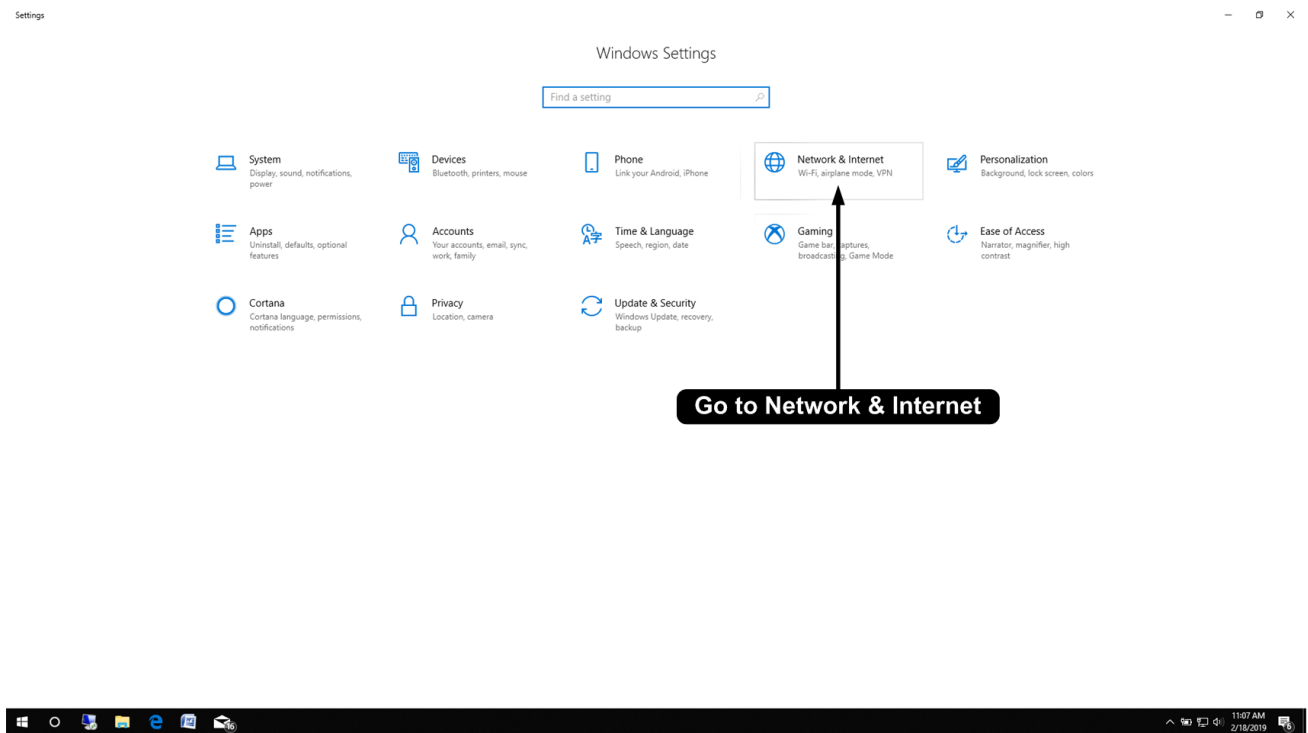


### 3) Go to "Network & Internet"


#### 4) Go to “Ethernet” on the Left side of the Menu

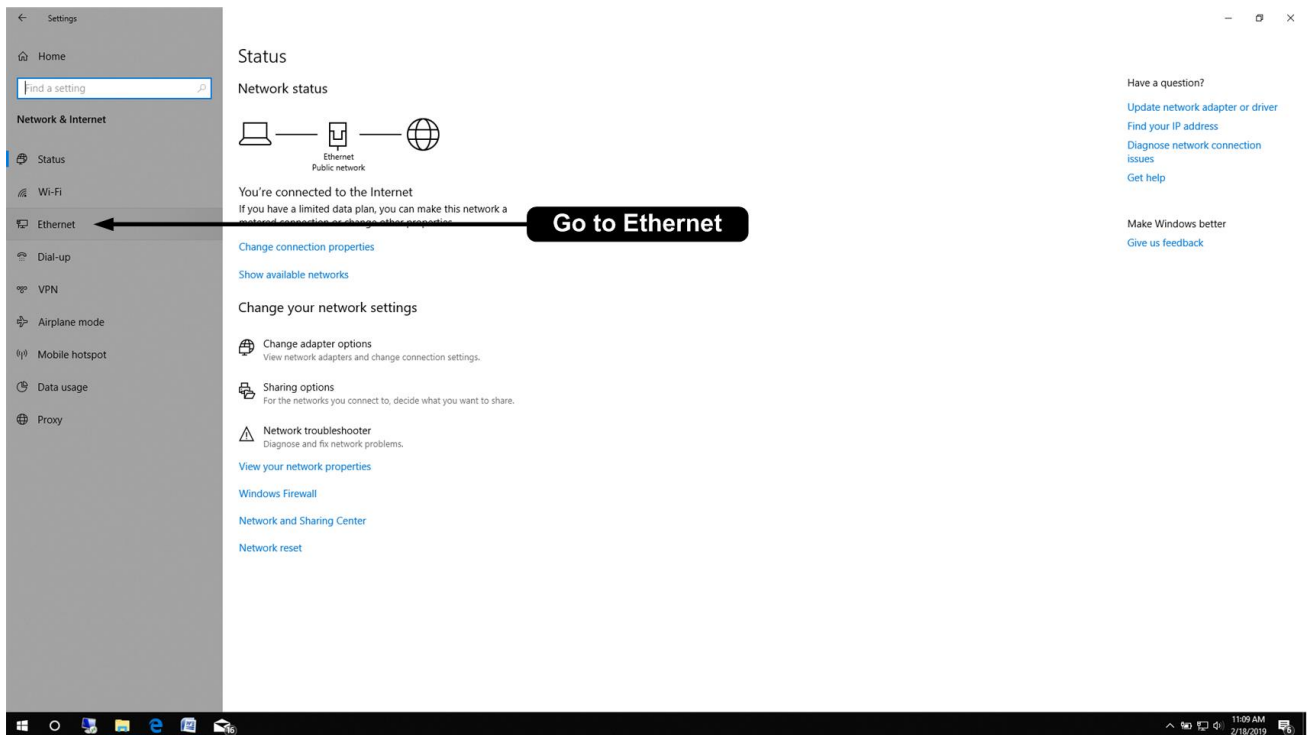


#### 5) Go to “Change adapter options”

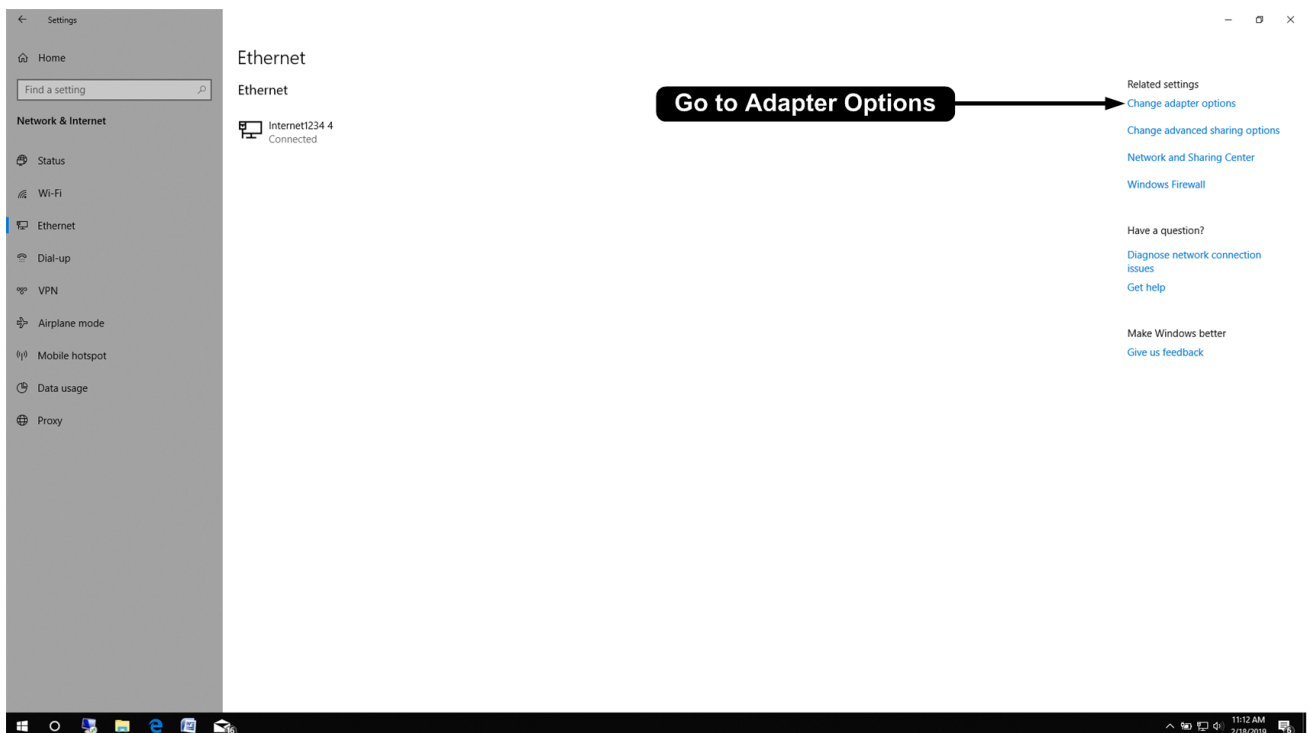

## 6) Double click on the **Ethernet** Source or Right Click and Select “Properties”

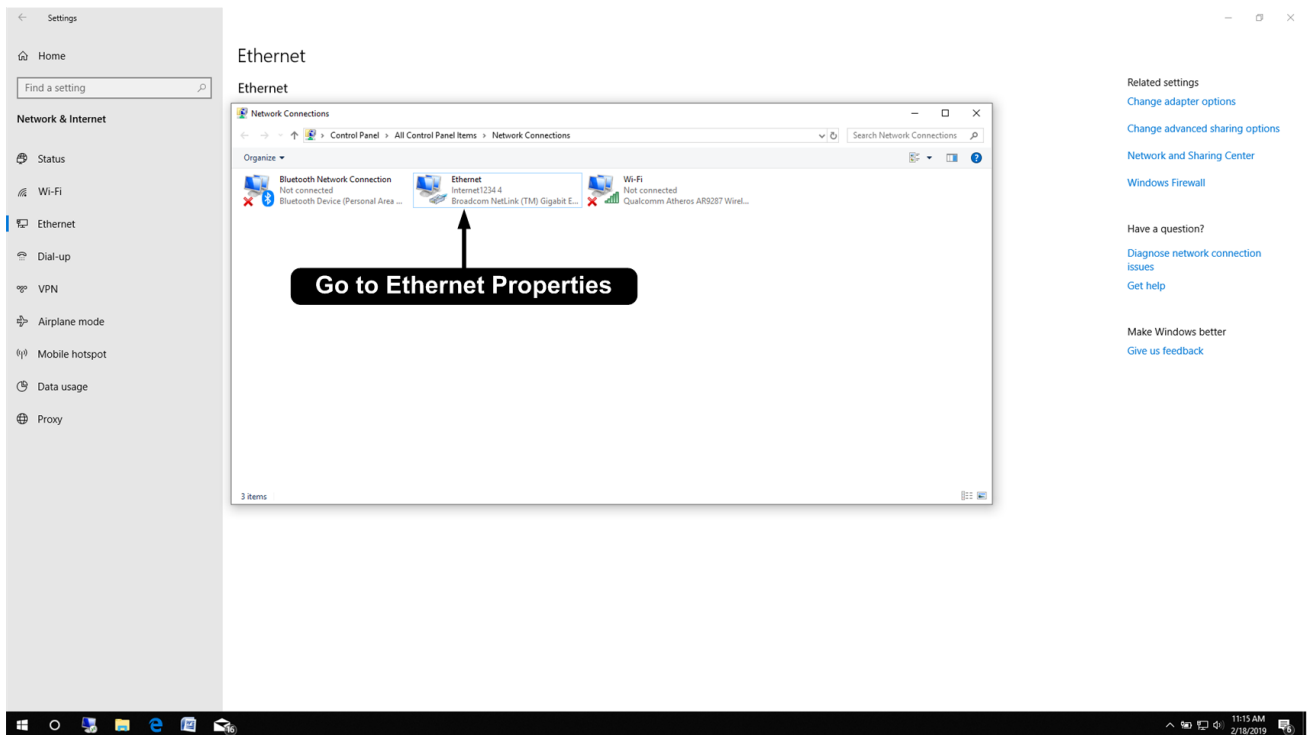

## 7) Open Properties

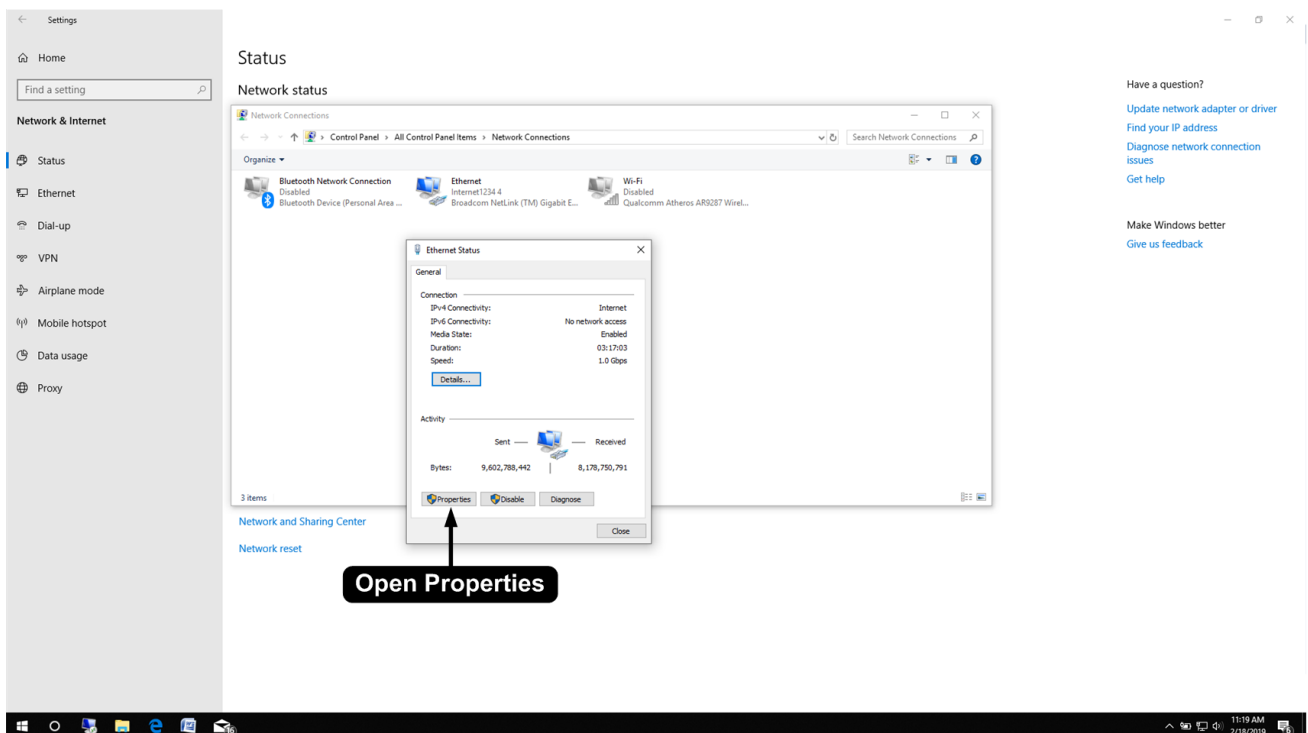

## 8) Go to “Internet Protocol Version 4 (TCP/IPv4)”

Go to Internet Protocol Version 4 (TCP/IPv4)


Go to Properties

## 9) Go to “Properties”

## 10) Go to “Use the following IP address”

Go to “Use the following IP address”

## 11) Set IP address

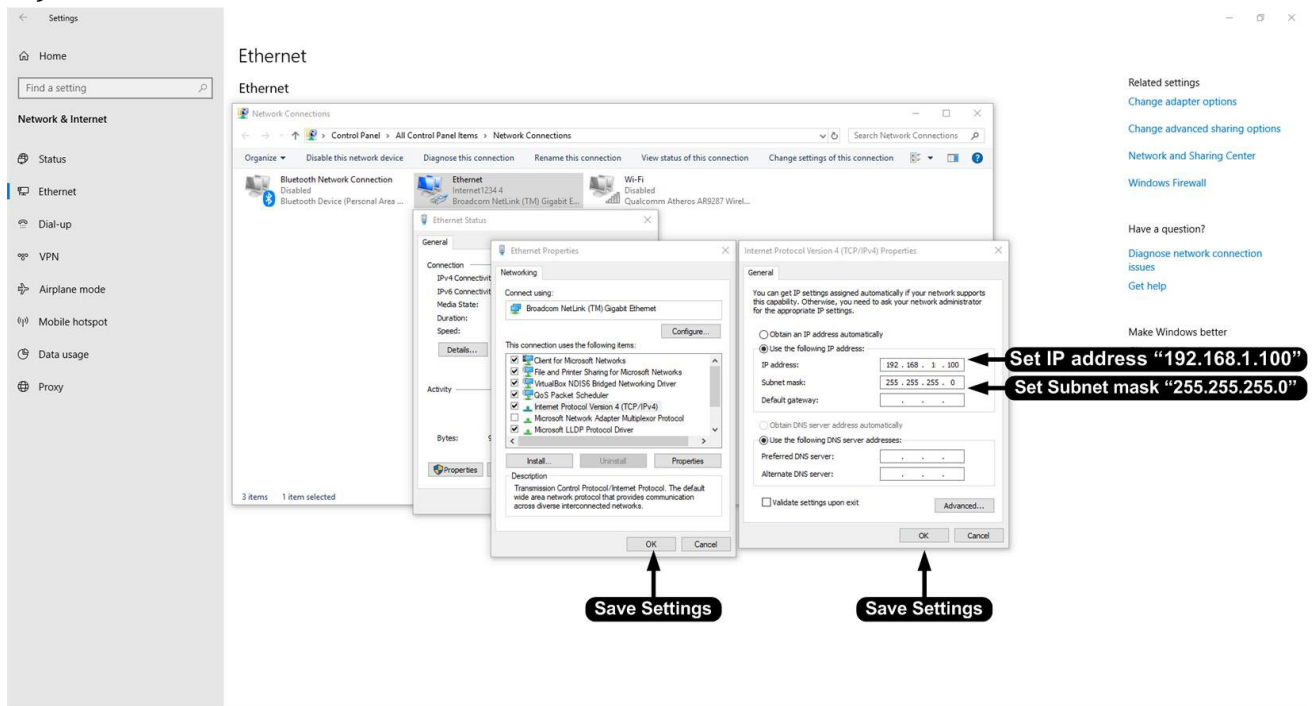


**IP address : 192.168.0.100**

**Subnet mask: 255.255.255.0**

## 12) Save All the Settings

## 13 ) Open Internet browser, Enter the IP address - 192.168.1.10

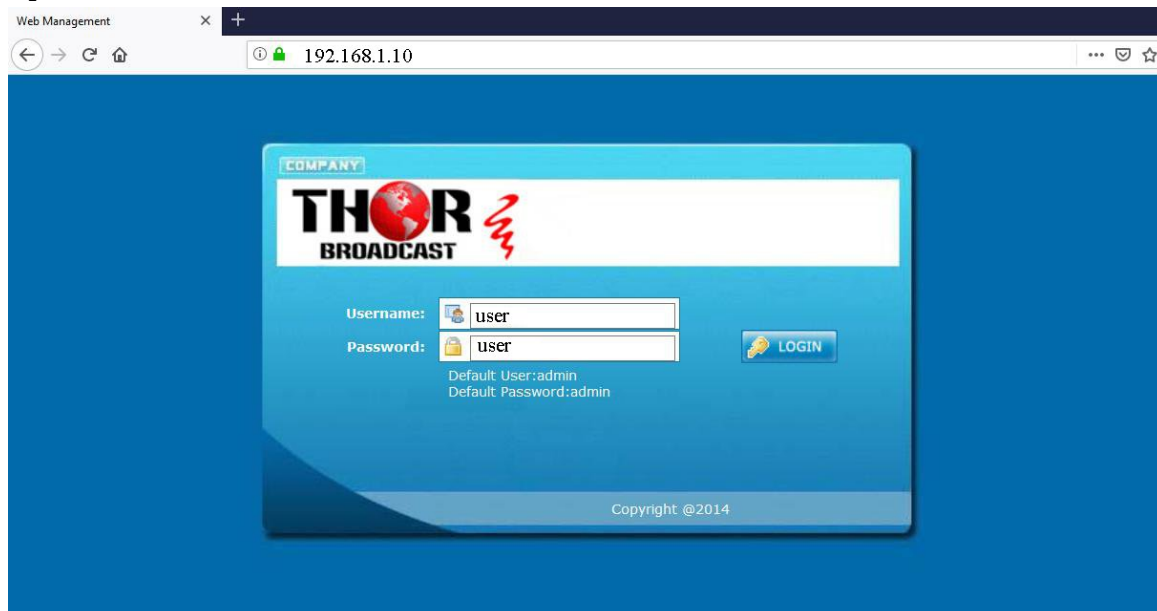

**192.168.1.10**

**Username: user**

**Password: user**