

# HOW TO USE THE DIRECTV TABLET BUTTONS



**HOME:** DirecTV Home button.

**NUMBERS:** These are used to enter the DirecTV channel .

**GUIDE:** Press the GUIDE button to go to the program guide screen. To see what's showing, press the GUIDE button to bring up the on-screen program guide. The guide holds 7 days (3 days for SD) of programming information for you.

**LIST:** The LIST button takes you to the To Do List.

**EXIT:** Press EXIT to get out of any menu screen and return to live TV.

**ARROWS and OK:** Use the ARROW buttons and OK button to navigate though the guide or any menu screen.

**BACK:** Press BACK to move back to the previous screen. (You can also use the LEFT ARROW button to step backward one column at a time.

**MENU:** The MENU key takes you to the main DirecTV system where you go to access all of the features available in the DirecTV system, not the tablet system.

**INFO:** Press INFO on any show to see information about that show.

**ENTER:** Similar to the OK Button.

**END:** End the screen.

**RED, GREEN and BLUE:** the RED, GREEN, YELLOW, and BLUE buttons on the remote are special short cuts that change function depending on which menu screen you are looking at.

**NAVIGATE:** You can navigate in the guide three ways, (1) use the ARROW buttons to move one cell at a time up/down/left/right; (2) use the CHAN/PAGE button to scroll a whole page up or down; (3) type in the channel number to go directly there.

You can move through all of the DIRECTV user screens using only the direction ARROW buttons and the SELECT button as appropriate.