



**Zenty | Professional A/V Solution Provider**

## **User Manual** <sup>[V1.0]</sup>



### **Bluetooth to Dante Converter Wall Plate**

**ZT-487 | ZT-BT2Dante-W**



ZENTY®  
9807 EMILY LANE  
STAFFORD, TX 77477  
(844) 200-1945  
SUPPORT@ZENTY.COM

## SAFETY PRECAUTIONS

- Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.
- Please keep the following in mind as you unpack and install this equipment:
- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

Thank you for choosing to use Zenty Bluetooth panel. Before using the product, please read this user manual carefully. Due to continuous product upgrades, any changes are subject to change without prior notice.


# Table of Contents

1. Device Connection & Installation .....	4
2. Package Contents .....	5
3. Device Ports .....	5
4. Maintenance .....	6
5. Warranty .....	6
6. Mail-In Service .....	6
7. Limited Warranty Limits and Exclusions .....	6

# 1. Device Connection & Installation

Wireless devices such as mobile phones and iPads are connected to the panel via Bluetooth . The panel is powered by a POE switch, converts audio into Dante audio and outputs it to the switch. Finally, it is configured from the Dante Controller software on the computer to output to the backend.

Devices such as mobile phones, iPads, Computers etc.

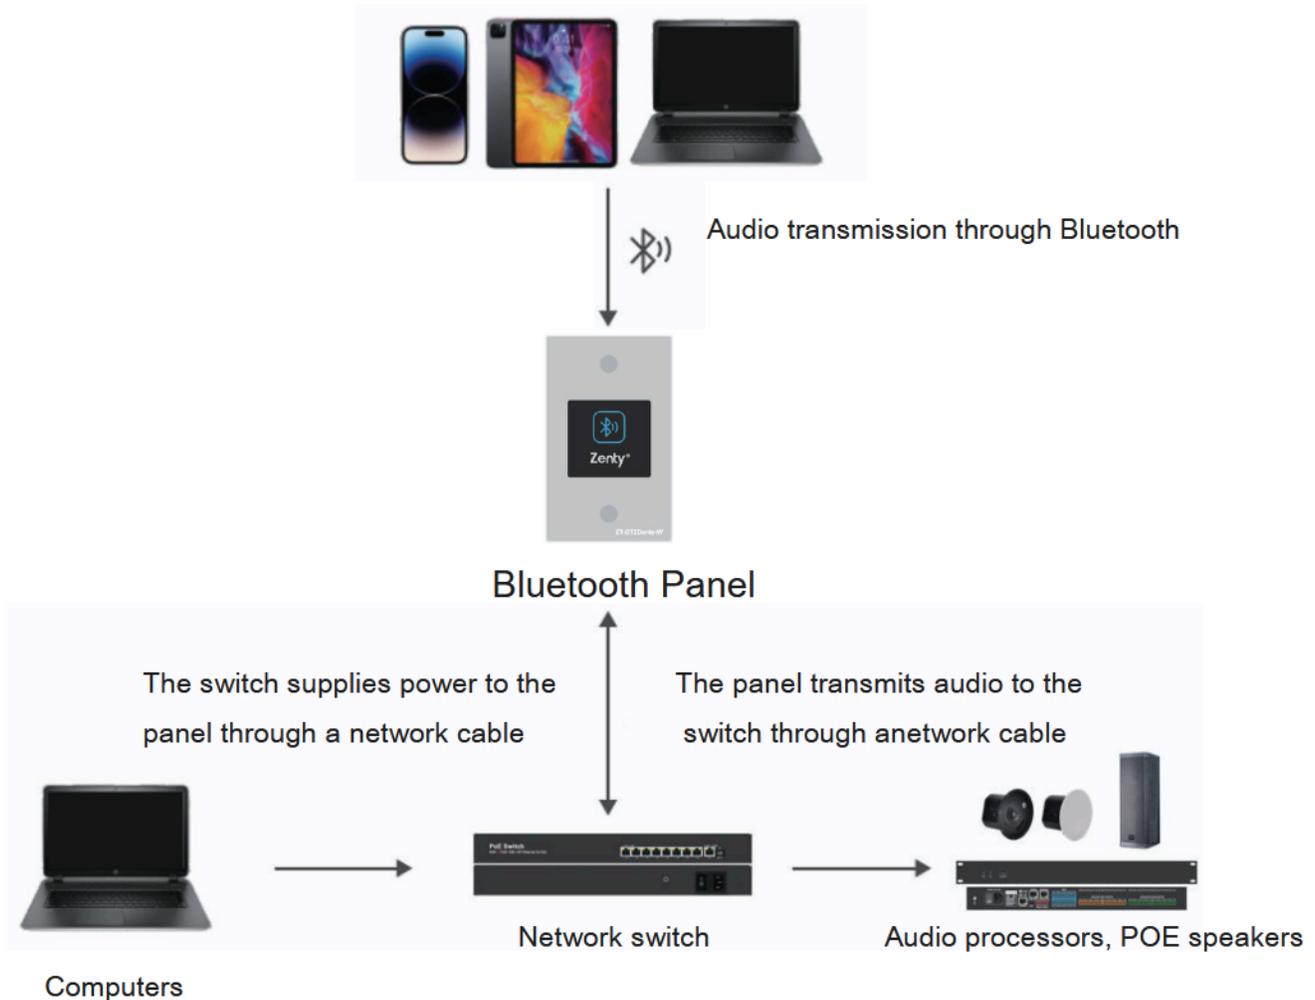


## Device Connection

1. Turn on the Bluetooth button on the panel, connect the phone or pad to the panel through Bluetooth function, and connect the panel to the POE switch through a network cable.
2. Insert the internet cable into the panel, remove the sticker covering the surface from the back of the panel, and fix the panel to the bottom box with screws.

## 2. Package Contents

- (1) x Zenty Bluetooth to Dante Converter Wall Plate
- (1) x Installation Accessories
- (1) x User Manual
- (1) x Certificate of Conformity

## 3. Device Ports

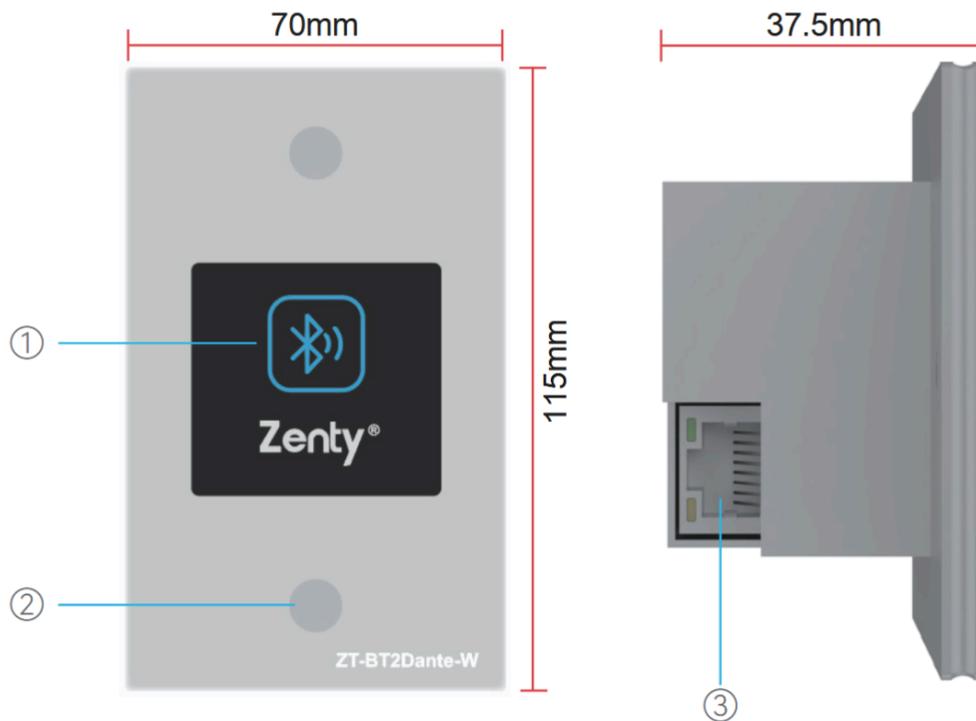

- ① Bluetooth button: Switch Bluetooth mode
- ② Screw hole position to fix the panel
- ③ Network port: POE power supply and audio transmission

## 4. Maintenance

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner, or benzene to clean.

## 5. Warranty

If your product does not work properly because of a defect in materials or workmanship, our company (referred to as “the warrantor”) will, for the length of the period indicated as below, “Parts and Labor (5) Years”, which starts with the date of original purchase (“Limited Warranty period”), at its option either (a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

During the “Labor” limited warranty period, there will be no charge for labor. During the “Parts” warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty is extended only to the original purchaser and only covers products purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.

## 6. Mail-In Service

When shipping the unit, carefully pack and send it prepaid, adequately insured, and preferably in the original carton. Include a letter detailing the complaint and provide a daytime phone and/or email address where you can be reached phone and/or email address where you can be reached.

## 7. Limited Warranty Limits and Exclusions

This Limited Warranty ONLY COVERS failures due to defects in material or workmanship and DOES NOT COVER normal wear and tear or cosmetic damage. The Limited Warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by warrantor, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, mis-adjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or service by anyone other than a Factory Service center or other Authorized Servicer, or damage that is attributed to acts of God.

There are no express warranties except as listed under “Limited Warranty Coverage”. The warrantor is not liable for incidental or consequential damages resulting from the use of this product or arising out of any breach of this warranty. (As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the service, loss of or damage to media or images, data or other recorded content. The items listed are not exclusive but are for illustration only). Parts and service, which are not covered by this limited warranty, are your responsibility.



WWW.ZENTY.COM  
9807 EMILY LANE  
STAFFORD, TX 77477

(844) 200-1945  
SUPPORT@ZENTY.COM  
SALES@ZENTY.COM