

DVDO



DVDO-RS-1

Advanced Education Room Kit

User Manual

Version: V1.0.0



Important Safety Instructions



1. Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



6. Clean this apparatus only with dry cloth.




2. Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.



7. Unplug this apparatus during lightning storms or when unused for long periods of time.



3. To prevent risk of electric shock or fire hazard due to overheating, do not obstruct the unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.

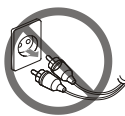

8. Protect the power cord from being walked on or pinched particularly at plugs.



4. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.



9. Only use attachments / accessories specified by the manufacturer.



5. Do not place sources of naked flames, such as lighted candles, on the unit.



10. Refer all servicing to qualified service personnel.

Table of Contents

Introduction	4
Overview.....	4
Package Contents	5
Specifications.....	6
Panel Description	9
Receiver	9
Transmitter	11
Control Panel.....	12
Installation and Wiring.....	14
Installation	14
Wiring	14
Pinout Information.....	17
Auto Switch.....	18
OSD	19
Control Panel Operation	20
Volume Knob	20
Source Select Buttons	20
ON/OFF Buttons	21
IR Learning	22
RS232 Control	23
Web UI Control	24
Get Access to the Web UI.....	24
Basic A/V Control.....	25
Settings Page Introduction.....	26
Warranty Terms and Conditions.....	35

Introduction

Overview

The education room kit is a turn-key solution for classroom AV connectivity and control. It designed to provide HDMI video switching, system control, video extension and analog audio amplification in a convenient 3-piece kit. Utilizing the Valens VS2010 processor, power, control, video up to 4K@60Hz and audio are transported over a single Category 6a cable between the wall plate transmitter and the receiver with a minimum transport distance of 30m/100ft.

The wall plate control panel connects to the wall plate transmitter with a second Category 6a cable. The wall plate control panel allows remote switching of the sources and volume control from a convenient location. You can switch among four HDMI Inputs and you can scale the HDMI inputs up to 4K@60Hz. All the power needed for the system is provided by the receiver.

Additionally, the receiver features a built-in Web UI for control and analog audio de-embedding to your choice of a built-in 20W stereo amplifier for driving low impedance speakers, a 70V amplifier for driving commercial 70V speakers or stereo analog audio outputs. The system also supports DSP mixing function, which allows you to output mixing audio of the any two or three among VIDEO audio inputs, TX AUDIO IN and RX AUDIO IN. System includes monitoring software which allows easy multi-room configuration, system monitoring and control along with easy firmware updating of all devices from a central networked computer. An integrated Ethernet switch allows easy configuration with the IP Network. Remote USB 2.0 connectivity adds to the features that make it a one box solution for any modern classroom.

Package Contents

Before you start the installation of the product, please check the package contents as below:

User Manual x 1

For Receiver:

- Receiver x 1
- DC 24V 5A Power Adapter x 1
- AC Power Cord with US Pins x 1
- AC Power Cord with UK Pins x 1
- AC Power Cord with EU Pins x 1
- AC Power Cord with AU Pins x 1
- IR Emitter x 1
- Phoenix Male Connectors (3.5mm, 2 Pins) x 2
- Phoenix Male Connectors (3.5mm, 3 Pins) x 4
- Phoenix Male Connector (5.08mm, 2 Pins) x 1
- Phoenix Male Connector (5.08mm, 4 Pins) x 1
- Mounting Brackets (with Screws) x 2
- Rubber Feet x 4

For Wall Plate Transmitter:

- Transmitter x 1
- 2-Gang US Plastic Decora Plates, White x 1
- #6-32*20mm Screws, Silver x 4
- #6-32*7mm Screws, White x 4

For Control Panel

- Control Panel x 1
- 1-Gang US Plastic Decora Plates, White x 1
- #6-32*20mm Screws, Silver x 2
- #6-32*7mm Screws, White x 2

Specifications

Technical	
Input/Output Port	<p>Transmitter: 3 x HDMI IN; 1 x Source Selector Button; 1 x AUDIO IN; 1 x USB Type-B Host; 1 x Micro USB FW update port; 1 x HDBT OUT; 1 x RJ45; 1 x REBOOT button</p> <p>Receiver: 1 x HDBT IN; 1 x HDMI IN, 1 x HDMI OUT; 2 x LAN; 1 x Micro USB FW update port; 1 x 4Ω/8Ω SPEAKER OUT; 1 x 70V SPEAKER OUT; 1 x Speaker Out Select Switch; 3 x USB Type-A Device; 1 x IR OUT; 1 x RS232 IN; 1 x RS232 OUT; 1 x select switch (LINE IN/MIC IN/MIC IN with phantom power); 1 x AUDIO IN; 1 x MUTE IN; 1 x AUDIO OUT; 1 x DC 24V; 1 x RESET button</p> <p>Control Panel: 1 x Volume control knob; 1 x IR Sensor; 6 x Button; 1 x RJ45</p>
Input Signal Type	<p>Transmitter HDMI with 4K@60Hz YUV 4:2:0, HDCP 2.2</p> <p>Receiver: HDMI with 4K@60Hz YUV 4:4:4, HDCP 2.2</p>
Input Resolution Supported	<p>HDMI IN on Transmitter: VESA: 800x600⁸, 1024x768⁸, 1280x768⁸, 1280x800⁸, 1280 x960⁸, 1280x1024⁸, 1360x768⁸, 1366x768⁸, 1440x900⁸, 1600x900⁸, 1600x1200⁸, 1680x1050⁸, 1920x1200⁸</p> <p>SMPTTE: 1280x720P^{6,7,8}, 1920x1080P^{6,7,8}, 3840x2160^{2,3,5,8*}, 4096x2160^{2,3,5,8*}</p> <p>1 = at 23.98 Hz, 2 = at 24 Hz, 3 = at 25 Hz, 4 = at 29.97 Hz, 5 = at 30 Hz, 6 = at 50 Hz, 7 = at 59.94 Hz, 8 = at 60 Hz, * = 4:2:0</p> <p>HDMI IN on Receiver: VESA: 800x600⁸, 1024x768⁸, 1280x768⁸, 1280x800⁸,</p>

Technical	
	<p>1280x960⁸, 1280x1024⁸, 1360x768⁸, 1366x768⁸, 1440x900⁸, 1600x900⁸, 1600x1200⁸, 1680x1050⁸, 1920x1200⁸</p> <p>SMPTE: 1280x720P^{6,7,8}, 1920x1080P^{6,7,8} 3840x2160^{2,3,5,8}, 4096x2160^{2,3,5,8}</p> <p>1 = at 23.98 Hz, 2 = at 24 Hz, 3 = at 25 Hz, 4 = at 29.97 Hz, 5 = at 30 Hz, 6 = at 50 Hz, 7 = at 59.94 Hz, 8 = at 60 Hz</p>
Output Signal Type	HDMI with 4K@60Hz YUV 4:4:4, HDCP 2.2
Output Resolution Supported	<p>VESA: 800x600⁸, 1024x768⁸, 1280x768⁸, 1280x800⁸, 1280x960⁸, 1280x1024⁸, 1360x768⁸, 1366x768⁸, 1440x900⁸, 1600x900⁸, 1600x1200⁸, 1680x1050⁸, 1920x1200⁸</p> <p>SMPTE: 1280x720P^{6,8}, 1920x1080P^{6,8}, 3840x2160^{2,3,5,6,8}, 4096x2160^{2,3,5,8}</p> <p>1 = at 23.98 Hz, 2 = at 24 Hz, 3 = at 25 Hz, 4 = at 29.97 Hz, 5 = at 30 Hz, 6 = at 50 Hz, 7 = at 59.94 Hz, 8 = at 60 Hz</p> <p>Note: Built-in Scaler cannot output resolutions with Deep Color, HDR and 4:2:2/4:2:0 color space.</p>
Audio Format	<p>HDMI IN/OUT: Stereo</p> <p>All AUDIO IN & MIC/LINE IN: Stereo</p> <p>AUDIO OUT & 4Ω/8Ω SPEAKER OUT: Stereo</p> <p>70V SPEAKER OUT: Mono</p>
Maximum Data Rate	<p>HDMI IN, HDBT OUT on transmitter & HDBT IN on receiver: 10.2Gbps</p> <p>HDMI IN & HDMI OUT on receiver: 18Gbps</p>
Control Method	<p>Control Panel; Button on transmitter;</p> <p>LAN control (Web UI/Telnet); RS232</p>

General	
Operating Temperature	0°C to 45°C (32°F to 113°F)
Storage Temperature	-20°C to 70°C (-4°F to 158°F)
Humidity	10% to 90%, non-condensing
ESD Protection	Human-body Model: ±8kV (Air-gap discharge)/ ±4kV (Contact discharge)
Power Supply	DC 24V 5A
Power Consumption (Max)	81W
Device Dimension (W x H x D)	Transmitter: 89mm x 105.6mm x 43mm/3.5" x 4.16" x 1.69" Receiver: 215mm x 42mm x 160.2mm/8.46" x 1.65" x 6.31" Control Panel: 45mm x 105.6mm x 28.7mm/1.77" x 4.16" x 1.13"
Product Weight	Transmitter: 0.3kg/0.66lb Receiver: 1.43kg/3.15lb Control Panel: 0.16kg/0.35lb

Transmission Distance


Note: The use of T568B straight-through Category cables is recommended.

Cable Type	Range	Supported Video
Cat 5e	100m/330ft	Up to 1080P@60Hz 36bpp
	90m/295ft	1080P@60Hz 48bpp
Cat 6/6a/7	100m/330ft	1080P@60Hz 3D 4K@30Hz 4:4:4 24bpp 4K@60Hz 4:2:0 24bpp
HDMI	Input: 15m/50ft Output: 10m/33ft	1080P@60Hz 24bpp
	Input/Output: 10m/33ft	4K@30Hz 4:4:4 24bpp 4K@60Hz 4:2:0 24bpp
	Input: 5m/16ft Output: 3m/10ft	4K@60Hz 4:4:4 24bpp

Panel Description


Receiver

Front Panel

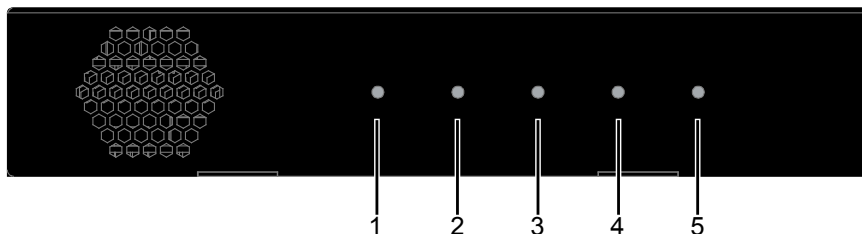

No.	Name	Description
1	POWER LED	On: The receiver is powered on. Off: The receiver is powered off.
2	LINK LED	On: The receiver is connected to the transmitter. Off: The receiver is not connected to the transmitter.
3	STATUS LED	On: The receiver is working properly. Off: The receiver is not working properly.
4	HDBT IN LED	On: The HDBT input is selected. Off: The HDBT input is not selected.
5	HDMI IN LED	On: The HDMI IN on receiver is selected. Off: The HDMI IN on receiver is not selected.


Rear Panel

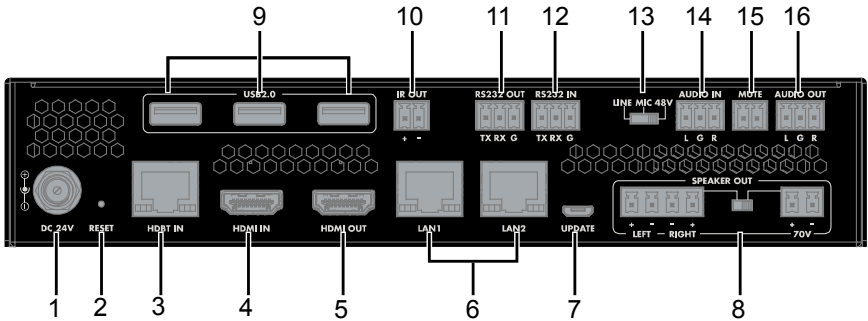

No.	Name	Description
1	DC 24V	Connect to the DC 24V power adapter provided.
2	RESET Button	When the receiver is powered on, use a pointed stylus to hold down this button for three or more seconds, LED indicators will blink quickly, and the transmitter and receiver will be restored to its factory defaults.
3	HDBT IN	Connect to the transmitter via a Cat 5e/6/6a/7 cable.
4	HDMI IN	Connect to an HDMI source.
5	HDMI OUT	Connect to an HDMI display.
6	LAN (1-2)	Connect to a control system for Web UI and Telnet control.
7	UPDATE	Firmware update port.
8	SPEAKER OUT	Selector Switch: Selector switch for speaker output. LEFT-RIGHT: Connect to the 4Ω/8Ω speaker. 70V: Connect to the 70V speaker.
9	USB 2.0	Connect to USB device(s) e.g. keyboard, mouse, USB camera, etc.
10	IR OUT	Connect to an IR device for IR output to display.
11	RS232 OUT	Connect to a RS232-enabled device for RS232 signal pass-through.
12	RS232 IN	Connect to a control PC or control system to control the education kit through RS232 serial control.
13	LINE/MIC/48V	LINE/MIC/48V Selector switch for audio input.

No.	Name	Description
		<p>LINE: Line in</p> <p>MIC: MIC in</p> <p>48V: MIC in with phantom power</p> <p>*Warning*: Before the selector switch is set to position “48V”, ensure any Line in device connected to “AUDIO IN” port has been removed; otherwise, device damage may occur.</p>
14	AUDIO IN	Connect to an audio device based on the setting of the LINE/MIC/48V selector switch.
15	MUTE	Connect to contact closure for muting the audio signal of AUDIO OUT and SPEAKER OUT.
16	AUDIO OUT	Connect to an audio receiver (e.g. amplifier).


Transmitter

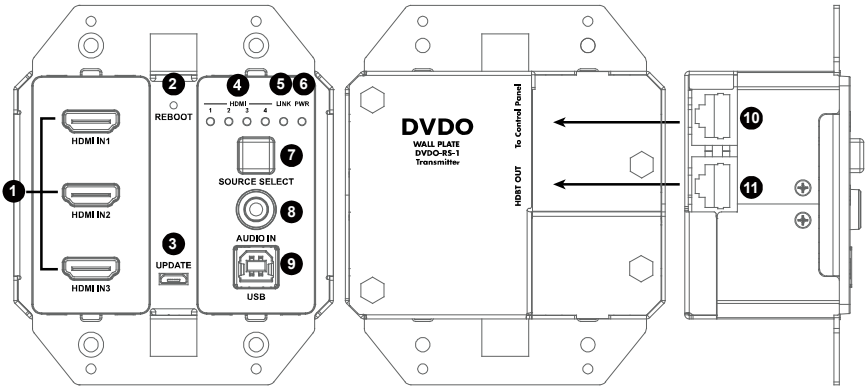

NO.	Name	Description
1	HDMI IN 1-3	Connect to the HDMI source device.
2	RBOOT	Use a pointed stylus to press the button to reboot the transmitter.
3	UPDATE	For firmware update.
4	HDMI IN LED (1-4)	<p>LED 1-3: HDMI IN 1-3 on transmitter,</p> <p>LED 4: HDMI IN on Receiver.</p> <p>On: The input source is selected.</p> <p>Off: The input source is not selected.</p>
5	LINK LED	On: The transmitter is connected to the receiver.

NO.	Name	Description
		Off: The transmitter is not connected to the receiver.
6	PWR LED	On: The device is powered on. Off: The device is powered off.
7	SOURCE SELECT	Source selector button. Short press the button to select the video source.
8	AUDIO IN	Audio input for stereo pass-through.
9	USB Host	Connect to a USB Host.
10	To Control Panel	Connect to the control panel via a Cat 5e/6/6a/7 cable.
11	HDBT OUT	Connect to the receiver via a Cat 5e/6/6a/7 cable.

Control Panel

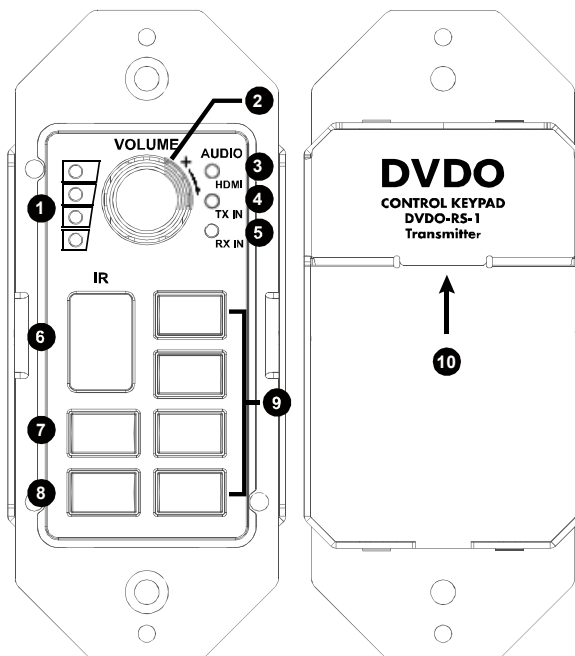

No.	Name	Description
1	Volume LED	Volume level LED indicator. Raise the volume, the LEDs will be on in gradient from bottom to top; lower the volume, the LEDs will be off in

No.	Name	Description
		gradient from top to bottom.
2	Volume Knob	<ul style="list-style-type: none"> • Turn the volume knob clockwise to raise the volume, counterclockwise to lower the volume. • When the audio mixing function is set to off, short press the volume knob to switch among the audio sources – VIDEO, TX IN and RX IN. • When the mixing audio function is set to on, short press the volume knob to select one audio input of the mixing audio or the mixing audio to adjust its volume.
3	Video LED	On: The audio from selected video source is selected. Off: The audio from selected video source is not selected.
4	TX IN LED	On: The AUDIO IN on transmitter is selected. Off: The AUDIO IN on transmitter is not selected.
5	RX IN LED	On: The AUDIO IN on receiver is selected. Off: The AUDIO IN on receiver is not selected.
6	IR	Receives IR signals from IR remote.
7	On	<ul style="list-style-type: none"> • Short press the button to power on the display. • Hold press the button for 3 seconds to power on the system. Note: When power sync function is set to ON, short press the button, the display and system power on functions will be tied together.
8	Off	<ul style="list-style-type: none"> • Short press the button to power off the display. • Hold press the button for 3 seconds to power off the system. Note: When power sync function is set to ON, short press the button, the display and system power off functions will be tied together.
9	Video 1-4	Source selector button. When a video source is selected, its corresponding selector button will light up. Video 1-3: HDMI IN 1-3 on transmitter. Video 4: HDMI IN on receiver.
10	To Wall Plate Transmitter	Connect to the transmitter via a Cat 5e/6/6a/7 cable.


Installation and Wiring

Installation

Note: Before installation, please ensure the kit is disconnected from the power source.

Steps to install the receiver on a suitable location:

1. Attach the installation bracket to the enclosure using the screws provided in the package separately.
2. The bracket is attached to the enclosure as shown.

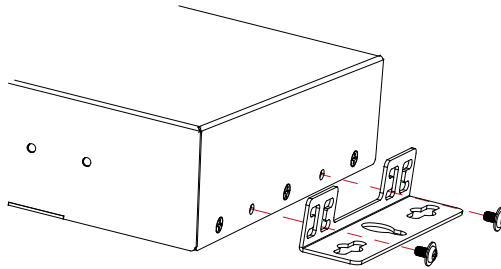

3. Repeat steps from 1 to 2 for the other side of the unit.
4. Attach the brackets to the surface you want to hold the unit against using the screws (provided by others).

Wiring

Steps for device wiring:

1. Connect video source

Connect the HDMI sources (such as PC, Blu-ray player, Apple TV, 4K media player, etc) to the HDMI IN ports of the transmitter respectively.

2. Connect HDBT OUT

Connect HDBT OUT of the transmitter to HDBT IN of the receiver with a Cat 5e/6/6a/7 cable.

3. Connect HDMI IN/OUT

Connect an HDMI source and an HDMI display to the HDMI IN and HDMI OUT ports of the receiver.

4. Connect AUDIO IN

Connect an audio device or a microphone to the AUDIO IN of the receiver based on the setting of the Line/MIC/48V selector switch.

5. Connect SPEAKER OUT&AUDIO OUT

Connect the speakers to the SPEAKER OUT of the receiver. If an external audio amplifier is to be used to with the system, connect it to the analog AUDIO OUT of the receiver.

6. Connect the control panel to the transmitter via a Cat 5e/6/6a/7 cable. This cable cannot exceed 30m/100ft.


7. Connect for additional control options:

- LAN Control (Telnet/Web UI): Connect the receiver to the same network as the control PC or control system via its LAN port.
- USB Control: Connect a USB host device to USB port of the transmitter and USB device to USB2.0 port of the receiver for remote KVM control.
- IR pass-through: Connect an IR emitter to the IR OUT of the receiver.
- RS232 Control: Connect the control PC to RS232 IN of the receiver to control the education system.
- RS232 Pass-through: Connect a RS232-enabled display such as a projector to the RS232 OUT of the receiver.

8. Connect the power adapter provided to the receiver.


One-way PoH enables the power to be sent from receiver to transmitter and control panel along Cat 5e/6/6a/7 cable. Only one power adapter is needed for the kit.

9. Power on all attached devices.

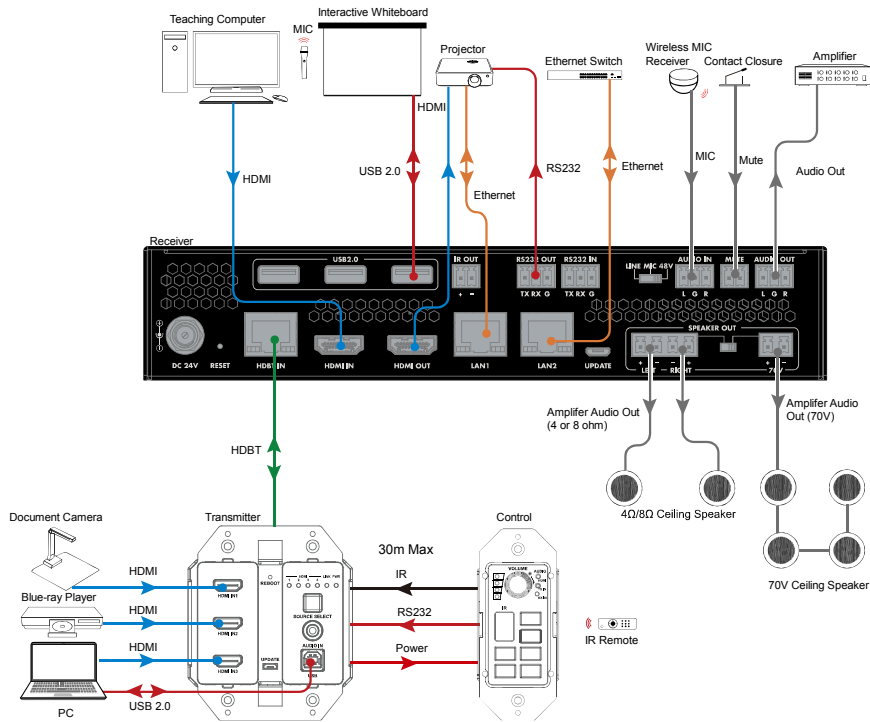


Pinout Information


IR OUT

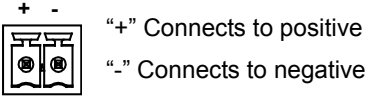

IR Emitter Wiring

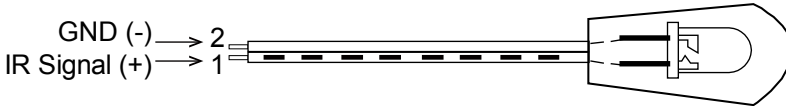


Audio In/Out

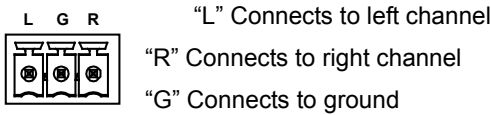


RS232



Speaker Out

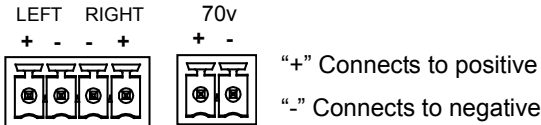

Speaker Wiring Configurations

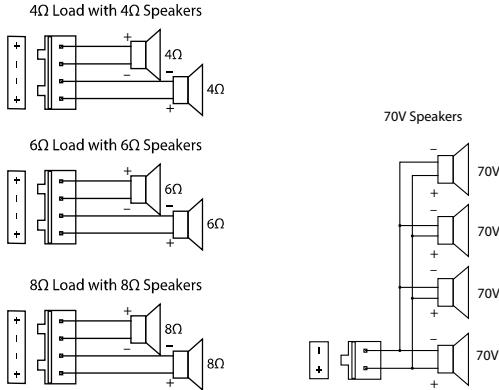

Auto Switch

This kit supports auto switching among the four HDMI inputs on transmitter and receiver.


1. When multiple sources are inserted, power on all devices, the input will be switched to the active source with highest priority, the priority is RX HDMI IN > TX HDMI IN 1 > TX HDMI IN 2 > TX HDMI IN 3.
2. When a new source is inserted, the input will be switched to it automatically. (Last-In-First-Out.)
3. When the currently selected source is removed, the input will be switched to the last selected port firstly; if the port has no source inserted, the input will be switched to the active source with highest priority.

Note:

- The Auto Switching function is enabled by default once all devices are powered on. To switch to a video source manually, see [“Control Panel Operation”](#) section for more information.
- Auto-Switching and Manually Switching can be set through Web UI and API commands (See [“Web UI Control”](#) section or separate document “API Command Set_DVDO-RS-1”).

OSD

The kit supports OSD (On Screen Display) to display its IP address. Connect your HDMI display to the HDMI OUT of the receiver via an HDMI cable, once receiver/the kit is powered on/reboots/resets and becomes fully operational, HDMI display connected to the HDMI OUT of receiver will show the IP address of the receiver/the kit. When receiver/the kit is working, the action of reconnecting HDMI display to HDMI OUT of receiver will also trigger the IP address display.

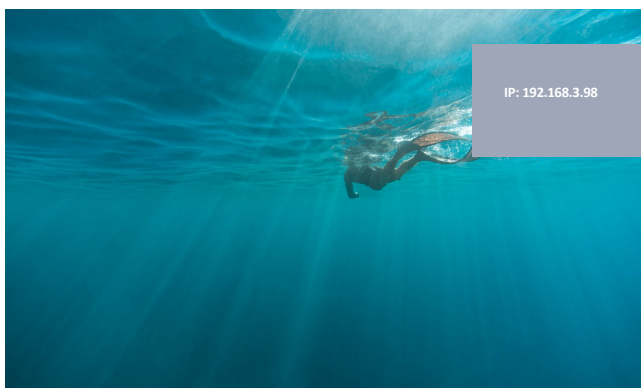

Control Panel Operation

Volume Knob

1. Rotate the Volume Knob

- Turn the Volume knob clockwise will raise the volume of the current audio;
- Turn the Volume knob counterclockwise will lower the volume of the current audio.

2. Short Press the Volume Knob

- When Audio mixing function is set to off, short press the volume knob will switch among the audio sources – VIDEO, TX IN and RX IN;
- When Audio mixing is set to on, short press the volume knob to select one audio input of the mixing audio or select the mixing audio to adjust the volume. The sequence is selected circularly among VIDEO, TX IN, RX IN and Mixing audio.

Note:

- Audio mixing function is set to on/off through web UI (please refer to [“Web UI Control”](#) section).
- VIDEO -- Audio de-embedded from the selected video source; TX IN – AUDIO IN on transmitter; RX IN – AUDIO IN on receiver; Audio Mixing – Mixed Audio of any two or three audio inputs among VIDEO, TX IN and RX IN.

Source Select Buttons

Press the **VIDEO (1-4)** buttons on control panel to select the specific video source. You can also press the **SOURCE SELECT** button on transmitter to switch among active video sources on both transmitter and receiver.

ON/OFF Buttons

Power On and Off the Display

To power on the display, short press the ON button on the control panel. The display can be controlled through CEC, RS232 and IR. By default, it is controlled through IR.

To power off the display, short press the OFF button on the control panel. The display can be controlled through CEC, RS232 and IR. By default, it is controlled through IR.

Power On and Off the System

To power on the system, hold press the ON button on the control panel for 3 seconds. If the power sync function is set to on, short press the ON button, the display and system power on functions will be tied together.

To power off the system, hold press the OFF button on the control panel for 3 seconds. If the power sync function is set to on, short press the OFF button, the display and system power off functions will be tied together.

Note: Power sync function is set through web UI (Please refer to "[Web UI Control](#)" section).

IR Learning

Set Display Control Mode

Set display control by IR through API commands or Web UI. For more information, see the separate document “API Command Set_DVDO-RS-1” or [“Web UI Control”](#) section.

Enter IR Learning Mode

Hold Press the **Video 1** button on the Control Panel for three seconds. The ON and OFF buttons will light up.

Start IR Learning

Take display volume-up and volume-down function for example:

1. Press the **ON** button and it will start to flash.
2. Point the display remote at the control panel IR sensor and press the Volume Up button on the remote. The ON button on the control panel will stop flashing.
3. Press the **OFF** button and it will start to flash.
4. Point the display remote at the control panel IR sensor and press the Volume Down button on the remote. The OFF button on the control panel will stop flashing.

Exit IR Learning Mode

Hold press the **Video 4** button on the control panel for three seconds. The ON and OFF buttons will go dark. You have now exited IR learning mode and your control panel is now configured to turn the display volume up and down using IR.

Test IR Control on Control Panel

To test the volume up and down control through IR for your display, short press the ON and OFF buttons on the control panel. Your display should respond to the commands appropriately. If not, ensure the display control mode is set as IR.

Note: To turn the education room kit system on or off, you will need to hold press the ON and OFF buttons on the control panel for three seconds.

RS232 Control

Advanced users may need to control the education kit through RS232 serial communication. Connect a control PC or control system to the RS232 IN port of the receiver. API command for RS232 control is available in the separate document “API Command Set_DVDO-RS-1”. A professional RS232 serial interface software (e.g. Serial Assist) may be needed as well.

Before executing the API command through RS232 serial connection, please ensure RS232 interface of the device and the control PC are configured correctly.

Parameters	Value
Baud Rate	9600 bps
Data Bits	8 bits
Parity	None
Stop Bits	1 bit
Flow Control	None


Web UI Control

The Web UI is accessible through a browser, e.g. Chrome, Firefox, Safari, Opera, IE10+, etc.

By default, the kit is assigned an IP address from a DHCP server; if it fails, it will revert to a default IP of 169.254.x.x. To get its IP address quickly, see “[OSD](#)” section.


Get Access to the Web UI

1. Connect the LAN port of the receiver to your PC using a straight UTP cable.
2. Input the IP address in your browser and press Enter. The following window will display.
 - To control the system without having to interact with the control panel, log into the kit as a user. The user name is “**user**” and the default password is “**user**”. Click Login to enter User Control page.

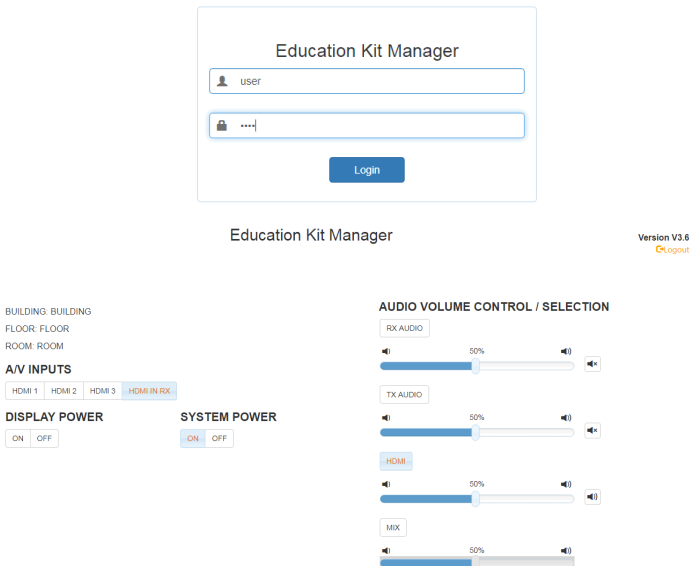

- For setting changes and firmware upgrade, log into the kit as an administrator. The user name is “**admin**” and the default password is

“**admin**”. Click Login to enter the Admin Control page.

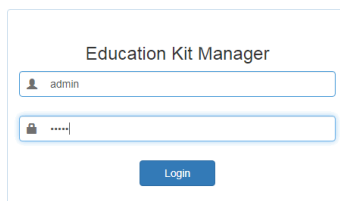

The login interface for the Education Kit Manager. It features a title 'Education Kit Manager' at the top. Below the title is a text input field containing the username 'admin'. Underneath that is a password input field with masked characters '.....'. A blue 'Login' button is positioned below the password field.

Education Kit Manager

  Version V3.6

BUILDING: BUILDING

FLOOR: FLOOR

ROOM: ROOM

A/V INPUTS

HDMI 1

HDMI 2

HDMI 3

HDMI IN RX

DISPLAY POWER

ON

OFF


SYSTEM POWER

ON


OFF

AUDIO VOLUME CONTROL / SELECTION


RX AUDIO

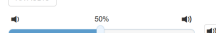


TX AUDIO

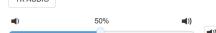

HDMI

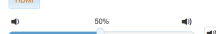

MIX

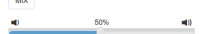

Basic A/V Control

A/V INPUTS

Switch among the four inputs.

HDMI 1-3: HDMI IN 1-3 on transmitter;

HDMI IN RX: HDMI IN on receiver.

DISPLAY POWER

ON/OFF: Click to turn the display on/off.

SYSTEM POWER

ON/OFF: Click to turn the system on/off.

AUDIO VOLUME CONTROL / SELECTION

- **Mute (🔇):** Click the 🔇 icon on the right of the sliders to mute/unmute corresponding audio sources separately.
- **RX AUDIO/TX AUDIO/HDMI SELECTION:** when audio mixing function is


set to OFF, click the RX AUDIO/TX AUDIO/HDMI button above the slider to switch to the corresponding audio source.

- **VOLUME CONTROL**



- 1) When the MIXING audio function is set to OFF, use the sliders of RX AUDIO/TX AUDIO/HDMI to adjust the volume of RX AUDIO/TX AUDIO /HDMI separately.
- 2) When the MIXING audio function is set to ON, use the sliders of RX AUDIO/TX AUDIO/HDMI to adjust the volume of RX AUDIO/TX AUDIO/HDMI separately, and use the slider of MIX to adjust the audio volume after mixing.

Note: Please refer to “AUDIO MIX Tab” section to get how to set MIXING audio function to ON/OFF.

Settings Page Introduction

To enter the Settings page, login as an administrator and click  on the upper-right corner of the control page.

 : Click to return to Admin Control page.

Education Kit Manager   Version V3.6

NAME / LOCATION AUDIO MIX CONTROL SETTINGS RS232 SETTINGS EDID / SCALING NETWORK PREFERENCES FIRMWARE UPGRADE

Name may only contain 32 characters (letters, numbers, single hyphens or space).

BUILDING

FLOOR

ROOM NAME/NUMBER

✕ Cancel
✓ Apply

NAME/LOCATION Tab

This tab allows you to define the location information, including building, floor, and room name/number.

- **Apply/Cancel:** Save or cancel the setting changes.

Note: Name may only contain 32 characters (letters, numbers, single hyphens or space).

AUDIO MIX Tab

This tab allows you to set Audio mixing function to ON/OFF, select audio sources to be used to mixing audio output, select ducking master and set the ducking parameters.

NAME / LOCATION
AUDIO MIX
CONTROL SETTINGS
RS232 SETTINGS
EDID / SCALING
NETWORK
PREFERENCES
FIRMWARE UPGRADE

DUCKING MASTER SELECT

RX IN
ON
TX IN
ON

MIXING ENABLED
ON

MIXER SETTINGS


RX IN
ON
TX IN
ON

RX IN:
0% 100%
TX IN:
0% 100%
HDMI IN:
0% 100%

DUCKING SETTINGS

ATTACK TIME:
0ms 1000ms
RELEASE TIME:
0ms 1000ms
DUCKING TRIGGER LEVEL
LOW HIGH
DUCKING LEVEL
1:1 100:1

- MIXING ENABLED:** Click the button to set audio mixing function to ON/OFF. The default setting is OFF.
When MIXING ENABLED is set to OFF, all the sliders and buttons are grey and cannot be set.
When MIXNG ENABLED is set to ON, you can set the following items.

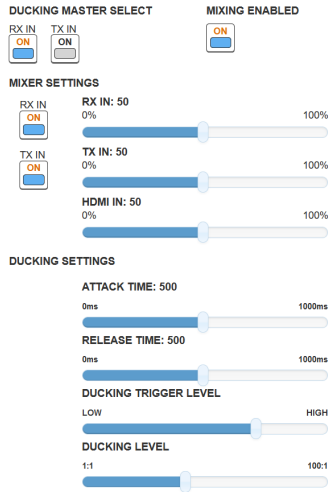

- **DUCKING MASTER SELECT:** Click the button to select one AUDIO INPUT as a ducking master from TX IN and RX IN. The default setting is RX IN.
- **MIXER SETTINGS:**
 - 1) **RX IN/TX IN button:** Click the corresponding button to select/deselect one AUDIO input to mix.

Note: The selected ducking master audio input cannot be deselected.

 - 2) **RX IN/TX IN/HDMI IN:** Use the slider to adjust the volume of the three signals in mixed audio separately. The default settings of the three signals are all 50%.
- **DUCKING SETTINGS:**
 - 1) **ATTACK TIME:** Use the slider to adjust the attack time after ducking master threshold is passed. The default setting is 500ms.
 - 2) **RELEASE TIME:** Use the slider to adjust the release time after ducking master threshold is not exceeded. The default setting is 500ms.
 - 3) **DUCKING TRIGGER LEVEL:** Use the slider to adjust the trigger level of ducking. The lower the level is set, the easier the ducking is triggered.
 - 4) **DUCKING LEVEL:** User the slider to set the volume ratio of the

master audio and other audio inputs in mixed audio. The larger the ratio is set, the lower the volume of other audio inputs when the main master audio input.

CONTROL SETTINGS Tab

NAME / LOCATION AUDIO MIX **CONTROL SETTINGS** RS232 SETTINGS EDID / SCALING NETWORK PREFERENCES FIRMWARE UPGRADE

—DISPLAY CONTROL—

IR

☒ SEND 2nd IR OFF COMMAND

1000 DELAY (100-10000MS) FOR 2nd IR OFF

—POWER SYNC—

☒ ON

☐ OFF

—VIDEO SWITCHING—

☒ AUTO

☐ MANUAL

✕Cancel ✓Apply

This tab allows you to set the display control, power sync mode and video switching mode.

- **DISPLAY CONTROL:** select the display to be controlled via CEC, RS232 or IR. The default setting is IR.

In IR mode:

- 1) **SEND 2nd IR OFF COMMAND:** Click the check box to set whether to automatically send or not to send the 2nd IR off command to the display automatically after the delay time. The default setting is checked.
- 2) **DELAY (100-10000MS) FOR 2nd IR OFF:** Set the delay time for the 2nd IR off command to be sent to the display automatically after the 1st IR command has been sent. The default setting is 1000ms.

- **POWER SYNC**

- 1) **ON:** Set power sync function to ON.
 - 2) **OFF:** Set power sync function to OFF.
- The default setting is ON.

- **VIDEO SWITCHING:**

- 1) **AUTO:** Check the box to set automatically video switching source to enable.
 - 2) **MANUAL:** Check the box to set manually video switching to enable.
- The default setting is AUTO.

- **Apply/Cancel:** Save or cancel the setting changes.

EDID/SCALING Tab

NAME / LOCATION
AUDIO MIX
CONTROL SETTINGS
RS232 SETTINGS
EDID / SCALING
NETWORK
PREFERENCES
FIRMWARE UPGRADE

INPUT 1 EDID
3840*2160@30Hz2CH-noHDR

INPUT 2 EDID
3840*2160@30Hz2CH-noHDR

INPUT 3 EDID
3840*2160@30Hz2CH-noHDR

INPUT 4 EDID
3840*2160@30Hz2CH-noHDR

Output Resolution
auto

Cancel Apply

This tab allows you to configure each input EDID and the output resolution.

- **INPUT EDID:** Click the drop-down menu to select a specific EDID. The default INPUT EDID is 3840 x 2160@30Hz 2CH-no HDR.
- **Output Resolution:** Click the drop-down menu to select a compatible resolution for connected display. By default, the Output resolution is set to auto.
- **Apply/Cancel:** Save or cancel the setting changes.

RS232 SETTINGS Tab

NAME / LOCATION
AUDIO MIX
CONTROL SETTINGS
RS232 SETTINGS
EDID / SCALING
NETWORK
PREFERENCES
FIRMWARE UPGRADE

DISPLAY BRAND/MODEL

BAUD RATE
115200

COMMAND ENDING (ASCII ONLY)
NONE

DISPLAY ON COMMAND
HEX

DISPLAY OFF COMMAND
HEX

DISPLAY INPUT COMMAND
HEX

POWER STATUS COMMAND
HEX

LAMP HOURS COMMAND
HEX

INPUT DELAY (1-120 Seconds)
10

Cancel Apply

This tab allows you to define the RS232 display control commands. If a display requires hex commands, make sure the Hex box is checked.

- **DISPLAY BRAND/MODEL:** Define the display name.
- **BAUD RATE:** Select the baud rate necessary to communicate with the display. Available baud rates are: 4800, 9600, 19200, 38400, 57600 and 115200.

- **COMMAND ENDING:** Select the command ending after each RS232 command. Available command endings are: NONE, carriage return, line feed, and carriage return and line feed.
- **DISPLAY ON COMMAND:** Enter the RS232 command to turn on the display.
- **DISPLAY OFF COMMAND:** Enter the RS232 command to turn off the display.
- **DISPLAY INPUT COMMAND:** Enter the RS232 command to switch to the input which is connected to the receiver.
- **POWER STATUS COMMAND:** Enter the RS232 command to get the display working status.
- **LAMP HOURS COMMAND:** Enter the RS232 command to get the lamp system working hours of the display.
- **INPUT DELAY (1-120 SECONDS):** Enter the delay time in seconds between the DISPLAY ON and DISPLAY INPUT command. This delay may be between 1 and 120 seconds.
- **Apply/Cancel:** Save or cancel the setting changes.

NETWORK Tab

NAME / LOCATION AUDIO MIX CONTROL SETTINGS RS232 SETTINGS EDID / SCALING **NETWORK** PREFERENCES FIRMWARE UPGRADE

MAC ADDRESS:
34:1b:22:80:96:f8

IP ADDRESS
192.168.9.51

SUBNET MASK
255.255.240.0

GATEWAY
192.168.2.1

☒ DHCP ☐ STATIC

This tab allows you to select between the dynamic and static IP addressing.

- **DHCP:** When enabled, the IP address of the kit is assigned automatically by the DHCP server connected.
- **STATIC:** When the kit fails to obtain an IP address from the network connected, select “STATIC” to set up the IP address manually.

- **Apply/Cancel:** Save or cancel the setting changes.

Note: The default setting is DHCP. If the kit fails to obtain an IP address from the network, or is set as “Static”, ensure your PC is in the same network segment as the kit.

PREFERENCES Tab

NAME / LOCATION
AUDIO MIX
CONTROL SETTINGS
RS232 SETTINGS
EDID / SCALING
NETWORK
PREFERENCES
FIRMWARE UPGRADE

INPUT NAME

The length of name is limited to 16 characters.

INPUT 1

INPUT 2

INPUT 3

INPUT 4

Cancel
Apply

PASSWORD

Password must be 4 to 16 characters in length (alphanumeric only).

user

admin

Cancel
Apply

AUDIO INPUT NAME

The length of name is limited to 16 characters.

INPUT 1

INPUT 2

INPUT 3

Cancel
Apply

Custom Web UI LOGO

You must upload an image in PNG format with a resolution of 292x80 pixels.

Upload

This tab allows you to change login password and input name.

- **INPUT NAME:** Change input names of INPUT 1-4.
- **PASSWORD:** Change the password of the login name user and admin. The default password for user is “user”, for admin is “admin”.
- **AUDIO INPUT NAME:** Change AUDIO input names of HDMI, TX AUDIO and RX AUDIO.
- **Apply/Cancel:** Save or cancel the setting changes.

Note:

- The new password must contain 4 to 16 characters (alphanumeric only).
- The length of name is limited to 16 characters.

- **Custom Web UI Logo:** Click “Upload” to select a PNG image from local PC to upload. The logo on web UI will be changed to the image uploaded.

Note: You must upload an image in PNG format with a resolution of 292x80 pixels

FIRMWARE UPGRADE Tab

NAME / LOCATION
AUDIO MIX
CONTROL SETTINGS
RS232 SETTINGS
EDID / SCALING
NETWORK
PREFERENCES
FIRMWARE UPGRADE

Version Information

TX-Core: V1.1	TX-In-Video: V1.0
TX-WallBoard: V2.1	RX-Core: V1.1
RX-In-Video: V1.0	RX-Scaler: V3.6

System

Reboot
Reset

ARM Upgrade


MCU Upgrade

This tab allows you to obtain the current firmware information and upgrade firmware to the latest version.

To upgrade the ARM module:


1. Click “Browse” for the bin file.
2. Click “Upgrade” to start the ARM upgrade.

ARM Upgrade

File : C:\fakepath\MstarUpgrade.bin
Browse


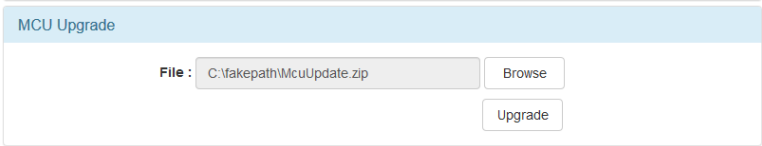
Upgrade

3. The following window will pop up to indicate the ARM upgrade is successful. Please wait for about 8 minutes, then refresh and login.

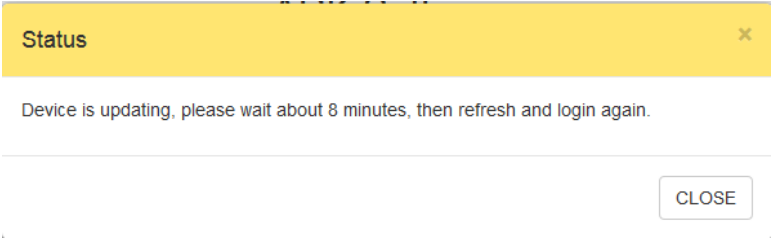


To upgrade the MCU module:

- 1. Click “Browse” for the upgrade file.



- 2. Click “Upgrade” to start the MCU upgrade.

The following window will pop up to indicate the MCU upgrade is successful. Please refresh and log in again.

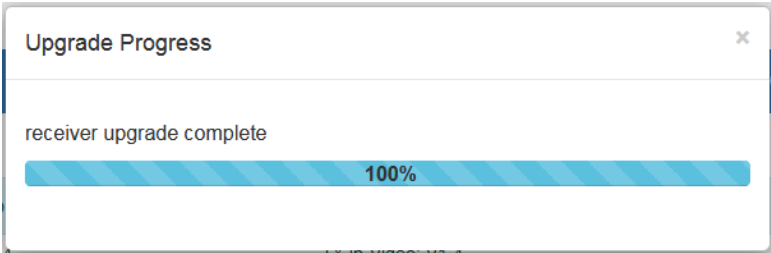

Note: Please do not power off the device during the upgrade process.

Warranty Terms and Conditions

For the following cases we shall charge for the service(s) claimed for the products if the product is still remediable and the warranty card becomes unenforceable or inapplicable.

1. The original serial number (specified by us) labeled on the product has been removed, erased, replaced, defaced or is illegible.
2. The warranty has expired.
3. The defects are caused by the fact that the product is repaired, dismantled or altered by anyone that is not from an authorized service partner. The defects are caused by the fact that the product is used or handled improperly, roughly or not as instructed in the applicable User Guide.
4. The defects are caused by any force majeure including but not limited to accidents, fire, earthquake, lightning, tsunami and war.
5. The service, configuration and gifts promised by salesman only but not covered by normal contract.
6. We preserve the right for interpretation of these cases above and to make changes to them at any time without notice.

DVDO
