



# Multifunction Buttons

Multifunction buttons before login:

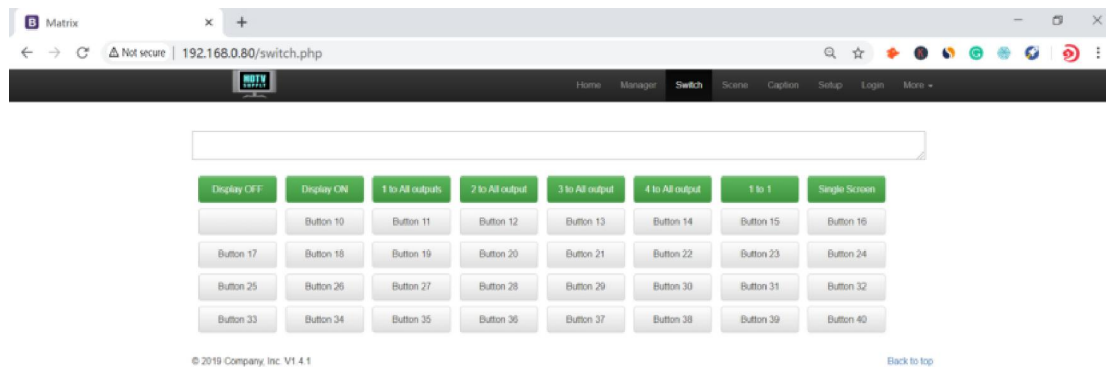

Multifunction buttons after login, it's under the “Switch” tap:

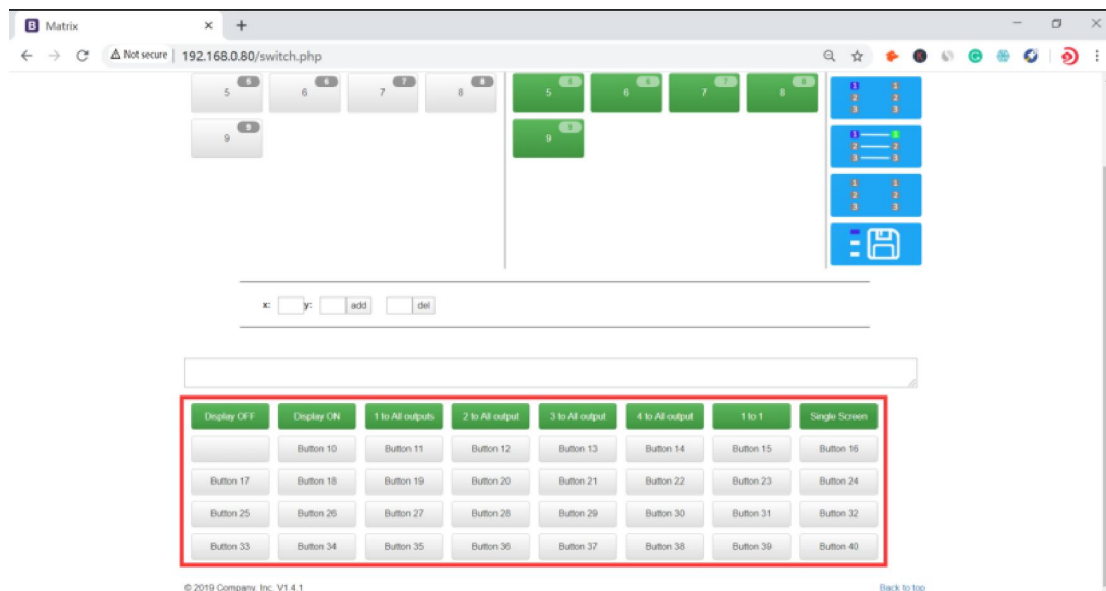

Multifunction buttons under the “Setup” tap:

Users can simply filled up the name and HEX codes(no spaces) on this tap and select the right COM number( COM1 or COM2) and the baud rate(9600 or 115200) to finish the settings. After the all the setting and then scroll down to click “Save” button, no need to reboot the matrix switcher, can just return back to the “Switch” tap and find the multifunctions buttons to start to control the other equipment by the simply hit the green buttons.

**Note:** All the RS232 cables need to use the cross-connections(PIN2:TX to Rx, PIN-3:TX to the Rx, PIN-5: Ground).

