

USER MANUAL

MODEL - AW-8P

All-weather Wall Mounted Passive Speaker



P/N: 2900-301857 Rev 1

RESISTANCE

OUTDOOR RATED

Contents

Introduction	1
Safety First!	1
Recycling Kramer Products	1
Included in the box	1
Overview	2
Models	3
Typical Applications	3
Installation Guide	4
Unpacking	4
Achieving Best Performance	4
Choosing the Best Location	4
Mounting the Speaker	5
Wiring the Speakers – best practice	5
Defining and calculating speaker's sound pressure levels (SPL)	12
Technical Specifications	14

AW-8P – Contents

Introduction

Thank you for purchasing the Kramer AW-8P Speaker. The AW-8P is a high-quality all-weather wall mounted passive speaker that delivers premium sound performance for commercial audio installations both outdoor and indoors. Designed for both 8Ω and 70V/100V systems, it is ideal for large scale background music & speech applications such as retail & hospitality as well as mission critical applications such as command and control centers.

Please read this manual carefully before installation to ensure optimal performance and safety.

Safety First!

- Installations must be performed by a qualified professional following local regulations.
- Ensure that the wall or the surface on which the speaker is installed can support the weight of the speaker.
- For safe outdoor installation of the AW-8P speaker, it is recommended to mount the speaker in a protected area such as under an eave or awning, and ensure the rear connector is properly sealed using the weatherproof cable gland provided with the speaker.
- Always power off the amplifier before changing transformer tap settings or connecting the cable to the speaker.
- Always check amplifier compatibility before connecting (impedance setup, power ratings).
- Do not open the speaker housing, as this may affect the sound quality and will void the warranty.

Recycling Kramer Products

The Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC aims to reduce the amount of WEEE sent for disposal to landfill or incineration by requiring it to be collected and recycled. To comply with the WEEE Directive, Kramer Electronics has made arrangements with the European Advanced Recycling Network (EARN) and will cover any costs of treatment, recycling and recovery of waste Kramer Electronics branded equipment on arrival at the EARN facility. For details of Kramer's recycling arrangements in your particular country go to our recycling pages at www.kramerav.com/il/quality/environment.

Included in the box

- AW-8P speaker (single unit)
- U-bracket mounting with 2 toolless bracket screws
- 4-pin pluggable Euroblock connector, 28-12AWG
- Weatherproof Cable Gland
- Quick Installation Manual

AW-8P – Introduction

Overview

The Kramer **AW-8P** is a high-performance 8" passive all-weather wall-mounted speaker, designed to deliver exceptional sound quality in both outdoor and indoor environments. Featuring an **IP66-rated and UL-compliant** enclosure made from flame-retardant materials, the **AW-8P** is built to withstand harsh conditions such as rain, dust, or humid indoor spaces like kitchens.

Ideal for conferencing and background music applications, the speaker supports 8Ω low impedance as well as multiple 70V/100V high impedance modes, offering flexible integration into a wide range of AV systems. The **AW-8P** includes a durable U-bracket for horizontal or vertical mounting and comes with tool-less mounting bracket screws for fast and simple installation. A weatherproof cable gland is provided to securely seal the speaker cable entry point, ensuring reliable protection of the connector area in outdoor installations. Available in both black or white, the **AW-8P** combines robust construction, excellent sound performance, and versatile mounting options for professional installations.

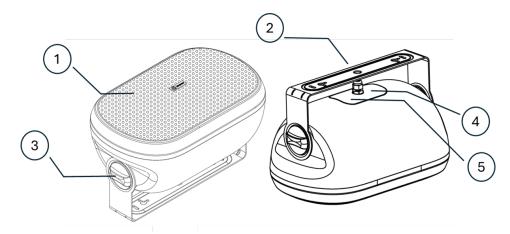


Figure 1: AW-8P Speaker

#	Feature
1	Grill
2	Mounting Bracket
3	Toolless Mounting Bracket Screws
4	Weatherproof Cable Gland
(5)	Terminal block & transformer Selector Tap

Key features

- Exceptional sound performance
- Low-impedance (8Ω) / high-impedance (70V/100V)
- Power handling: 60W continuous / 90W peak
- Sensitivity (1W@1m, free field): 90dB SPL
- Maximum SPL (@1m): Continuous 108dB SPL / Peak 110dB SPL
- IP-66 certified, UL1480A compliant

AW-8P – Overview

Models

Model	Part Number	Description
AW-8P (W) (SINGLE)	60-000109	8" all-weather, Two-way Wall Mounted Speaker, white
AW-8P (B) (SINGLE)	60-000107	8" all-weather, Two-way Wall Mounted Speaker, black

Typical Applications

AW-6P is ideal for the following typical applications:

- Mixed outdoor-indoor use cases such as restaurants, gym, retail and more
- Background music applications
- Applications with challenging environmental conditions

AW-8P – Overview

Installation Guide

Unpacking

- Carefully remove the speaker and mounting accessories from the packaging.
- Inspect all components for damage before proceeding.
- Dispose of the packaging materials according to regulations.

Achieving Best Performance

To achieve the best performance:

- Use only good quality speaker cables (we recommend Kramer high-performance, BC-2S cables and for plenum installations we recommend the low smoke halogen free cables, BC-2Sxx/LSHF).
- Do not secure the cables in tight bundles or roll the slack into tight coils
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality

Choosing the Best Location

- Plan the location of the speakers based on the designated listening area, the height of the ceiling and dispersion angle of the speakers.
- Wall Type Suitability: Ensure the wall is appropriate for mounting the speaker weight.
- Obstruction Check: Verify the mounting location is free of obstructions like electrical piping, AC ducts, or water lines.
- Recommended orientation horizontal installation: Angle the speaker slightly downward towards the listener for better sound distribution.

Indoor Installation tips:

- Ceiling Clearance: Avoid placing speakers too close to the ceiling to prevent sound distortion.
- Avoid Reflective Surfaces: Minimize placement near glass, tiles, or other reflective materials to reduce unwanted echo or reverb.

Outdoor Installation Tips:

- Sheltered Areas: prefer installing the speakers under eaves, awnings, or other sheltered areas for better protection from direct rain and sunlight.
- Wind Considerations: Avoid areas with strong wind exposure to prevent vibrations and noise.
- Neighbor-Friendly Positioning: For outdoor spaces, position speakers to direct sound toward the intended area and minimize sound spillover.

Mounting the Speaker

- Prepare the speaker cable the recommended location is behind the central hole in the Ubracket.
- Install the U-bracket in the designated location on the wall.
- Mount the speaker to the U-bracket, secure it with the two tool-less screws that are supplied with the speaker.
- Adjust the required angle of the speaker and tighten the screws.

Wiring the Speakers - best practice

Your passive speaker features both low impedance (8 Ω) and high impedance (70V/100V) modes. Understanding the difference is essential for safe installation and optimal performance.

Low Impedance Installation (8 Ohms)

Description:

In low impedance setup the speaker is connected directly to a low-impedance amplifier (typically rated at 4Ω , 8Ω , or 16Ω). This method is commonly used in small to medium-sized rooms where the amplifier is near the speakers, such as meeting rooms, boardrooms, or home studios.



Note: In low impedance mode the **AW-8P** has an impedance of 8Ω .

Key Features:

- Higher sound quality due to full-range signal.
- Limited cable runs (usually less than 20 meters).
- One amplifier channel per speaker or a pair of speakers.

High Impedance Installation (70V / 100V)

Description:

This method uses a transformer to distribute audio over long distances using thin speaker cables. Ideal for large areas or multi-speaker installations such as retail stores, restaurants, schools, or outdoor spaces.

Key Features:

- Supports multiple speakers on a single amplifier channel, installed in parallel.
- Long cable runs (up to hundreds of meters) without significant loss.



Note: In high impedance mode the AW-8P supports the following power ratings:

- o at 100V 30W / 15W / 7.5W
- o at 70V 30W / 15W / 7.5W / 3.8W

When to Choose a Low Impedance 8Ω Setup

- When Sound Quality Is Top Priority
 - 8Ω setups deliver direct, full-bandwidth signal from the amplifier to the speaker no transformer losses.
 - Ideal for:
 - Boardrooms and conference rooms
 - Auditoriums or lecture halls
 - Music-focused zones (bars, studios, luxury retail)

When You Have a Small Speaker Count

- A typical low-impedance amp channel supports 1 to 2 speakers per channel, maybe 4 if impedance allows.
- Perfect if:
 - You're wiring 1–4 speakers to a single amplifier channel.
 - You don't need multiple zones from one line.

• When Cable Runs Are Short

- Ideal for speaker cables under 30–50 meters (100-164 ft)
- No need to compensate for long-distance power loss with transformers.

• When You Want to Use Subwoofers or High-Power Speakers

Low-impedance amps can directly deliver the necessary wattage.

When You Need High SPL or Full-Range Performance

- Transformer-based 70V/100V systems often cut low frequencies to protect transformers and reduce core size.
- For full-range systems where bass and clarity matter 8Ω wins.

When to Use high impedance 70V/100V Line Systems

Use a 70V (North America) or 100V (ROW) system when:

Long Cable Runs (Typically >50–60m)


In low-impedance systems, long runs require very thick cables to avoid losses. High-impedance systems reduce current, allowing the use of thinner and longer cables.

Multiple Speakers Across Large Areas

Ideal for distributed audio (e.g., malls, schools, campuses, offices). Each speaker has a tap setting to draw only the needed wattage.

• Simpler Infrastructure & Scalability

One amplifier can drive dozens of speakers in parallel with no complex impedance matching. Makes zoning and volume control easier with transformers.

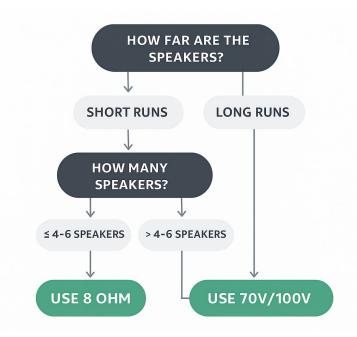



Note: In the U.S., 70V audio systems are standard because they stay just under the 100V peak limit defined by safety regulations, avoiding high-voltage installation requirements. In most other countries, 100V systems are common because local electrical standards allow higher voltages in low-current applications. The key advantage of 100V systems is that they deliver more power over longer distances with thinner cables, making them ideal for large-scale distributed audio installations.

Designing a low impedance system

Impedance (measured in ohms, \Omega) tells us how much resistance a speaker gives to the amplifier. When connecting multiple speakers to one amplifier channel, the **total impedance** depends on how you wire them: in **series** or in **parallel**.

Series (In Line) Connection

In a series connection, you connect the **positive of one speaker to the negative of the next**. The total impedance is the **sum** of all speaker impedances.

Formula: Total Impedance (Z) = $Z_1 + Z_2 + ... + Z_1$

Example:

Two 8Ω speakers in series:

 $8\Omega + 8\Omega = 16\Omega$ total impedance

Note: Use series wiring if your amplifier supports higher impedance or you want to reduce the power output slightly.

Parallel Connection

In a parallel connection, all speaker **positives go to the amp's positive**, and all **negatives to the amp's negative**. The total impedance **decreases** and is calculated using:

Formula (for 2 speakers):

 $1/Z_{total} = 1/Z_{1} + 1/Z_{2}$, then flip the result.

Example:

Two 8Ω speakers in parallel:

1 / Z = 1/8 + 1/8 = 2/8 \rightarrow Z = 4 Ω total impedance



Note: Use parallel wiring if your amplifier supports a 4Ω load - this gives more power but also puts more strain on the amplifier.

Recommended cable gage based on impedance and maximum distance:

Setup Distance	Single 8Ω Speaker	2 x 8Ω in Parallel (4Ω)	2 x 8Ω in Series (16Ω)
Up to 10m / 33ft 16 AWG / 1.31mm2		14 AWG / 2.08mm2	16 AWG / 1.31mm2
Up to 20m / 66	14 AWG / 2.08mm2	12 AWG / 3.31mm2	16 AWG / 1.31mm2
Up to 30m / 100ft 12 AWG / 3.31mm2		10 AWG / 5.26mm2	14 AWG / 2.08mm2
Up to 40m / 132ft	10 AWG / 5.26mm2	10 AWG / 5.26mm2	12 AWG / 3.31mm2

Designing a high impedance system

Choosing the correct speaker cable is essential for reliable performance and long-term system efficiency, especially in 70V/100V high-impedance systems where cables can span over 100 meters.

Key Design Steps

- Calculate Total Speaker Load Add the wattage of all speakers on each cable run
 Example: 4 × 30W = 120W total load
- 2. Measure Cable Run Length Measure the full round-trip length (amplifier to last speaker and back).
- **3. Select Cable Size (Gauge)** Use the following table to choose your cable size for a maximum 0.5dB loss (≈11%):

Total Load Cable Gauge	30W	90W	150W	300W
16 AWG (1.31mm²)	180m / 590ft	60m / 200ft	36m / 118ft	18m / 60ft
14 AWG (2.08mm²)	290m / 950ft	96m / 315ft	58m / 190ft	29m / 95ft
12 AWG (3.31mm²)	460m / 1500ft	153m / 500ft	92m / 300ft	46m / 150ft
10 AWG (5.26mm²)	730m / 2400ft	243m / 795ft	146m / 480ft	73m / 240ft




Note: These are **maximum total distances** for the **entire run**, based on copper cable and a 5% voltage drop.


Setting up speaker power handling mode

Your speaker includes a rotary transformer tap for setting the power handling mode.

To set the speaker to 8Ω low impedances, set the transformer tap so the 2 arrows will point at the 8Ω markings as shown in the picture:

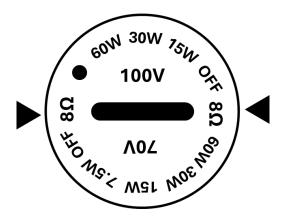

To set the speaker to a high impedance mode set the transformer tap to the desired power rating as shown in the picture. In this example, if the speaker is connected to a 100V line its power rating will be 60W and if connected to a 70V line its power rating will 30W.

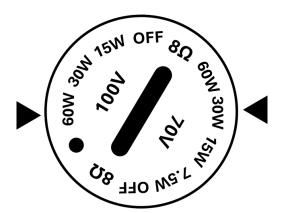



Always power off the amplifier before changing transformer tap settings or connecting the terminal connector to the speaker



Always check amplifier compatibility before connecting (impedance setup, power ratings)



Verify that the polarity of the wiring at the amplifier side and at all the speaker is correct, we recommend using color coding: red for + and black for -.

Parallel wiring and daisy chain installations

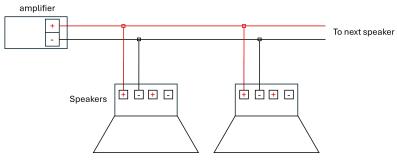


Figure 2 - Parallel Wiring


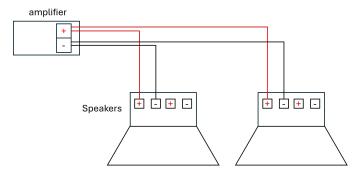


Figure 3 -Parallel Wiring - Separate Cables

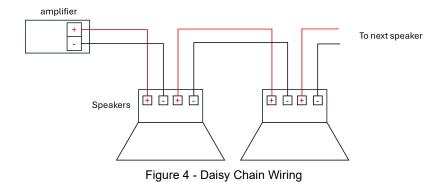

AW-8P – Installation Guide

Defining and calculating speaker's sound pressure levels (SPL)

The recommended SPL (Sound Pressure Level) for different applications depends on the purpose of the audio (e.g., speech, background music, or announcements) and the ambient noise level of the environment.

Here's a practical reference chart for commonly encountered commercial spaces:

Application	Recommended SPL	Purpose	Notes
Meeting Rooms	65–70 dB SPL	Speech clarity	Keep just above ambient noise; avoid listener fatigue
Classrooms	65–75 dB SPL	Speech + AV audio	Aim for clear intelligibility at the back of the room
Cafeterias	75–80 dB SPL	Announcements, ambient music	Slightly louder to overcome crowd noise
Restaurants	70–75 dB SPL	Background music, paging	Should not interfere with conversation
Retail Stores	70–78 dB SPL	Background music, ads	Volume can vary by vibe/brand identity
Offices (Open Space)	60–68 dB SPL	Paging, low-level BGM	Soft enough to not distract, but audible
Lobbies & Corridors	68–72 dB SPL	Announcements, background music	Balanced to avoid echo and blending with ambient noise
Factories / Warehouses	85–90 dB SPL	Announcements, alarms	Must exceed ambient noise for clarity and safety
Outdoor Areas	75–85 dB SPL	Paging, music	Depends heavily on environmental noise and coverage area
Auditoriums	80-95 dB SPL	Speech, music, live events	High dynamic range required; use zoning and delay speakers

Calculating speaker's sound pressure level (SPL)

To calculate the **Sound Pressure Level (SPL)** at a given distance from a speaker, based on its **sensitivity rating** and **input power**, you can use the following formula:

$$SPL_X = SPL_{ref} + 10 \cdot log_{10} (P) - 20 \cdot log_{10} (d)$$

Where:


- SPL_x = Sound Pressure Level at distance x (in dB SPL)
- **SPL**_{ref} = Speaker sensitivity (usually given as SPL at 1W @ 1 meter)
- P = Input power in watts
- **d** = Distance from the speaker in meters


Example: With a **AW-8P** with 87dB sensitivity, driven by a 60W amplifier, the sound pressure level 3 meters from the speaker will be:

$$SPL_{3m} = 90 + 10 \cdot log_{10} (60) - 20 \cdot log_{10} (3) = 98.2 dB SPL$$


Technical Specifications


AW-8P	
200 mm (8") with polypropylene cone, butyl rubber surround, copper-clad coil, vented aluminum former	
25 mm (1") black silk dome with dampening, ferrofluid- cooled	
, , , , , , , , , , , , , , , , , , , ,	
70Hz-20kHz	
87Hz-20kHz	
60W continues / 90W peak	
8Ω	
70V: 60W/ 30W / 15W / 7.5W 100V: 60W/ 30W / 15W	
90dB	
Continuous: 108dB SPL / Peak: 110dB SPL	
116° (1Khz to 4Khz)	
All-weather, surface mount horizontal & vertical	
U-Bracket bracket included in the box	
+ toolless mounting bracket screws	
4–pin pluggable Euroblock connector, 28–12AWG	
4. 5kg / 9.92lbs	
251mm x 240mm x 400mm / 9.88" x 9.45" / 15.75"	
251mm x 200mm x 400mm / 9.88" x 7.88" / 15.75"	
Packed as a single speaker per box.	
2 single speaker boxes packed in a master box	
322mm x 312mm x 467mm / 12.7" x 12.3" / 18.4"	
630mm x 330mm x 485mm / 24.8" x 13.0" x 19.1"	
Aluminum, removable logo	
V-0 Flame Retardant	
V-0 Flame Retardant	
Aluminum	
-5°C to +50°C (23°F to 122°F)	
-10°C to +55°C (14°F to 131°F)	
30% to 85%, RHL non-condensing	
UL1480A compliant, CE, UKCA	
RoHS, REACH, WEEE	
IP66	

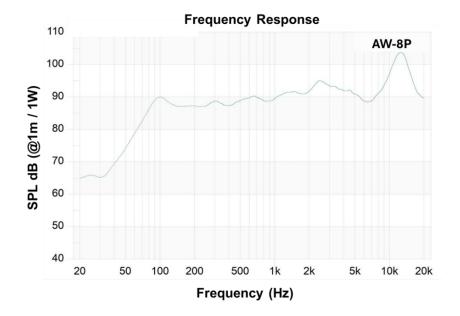

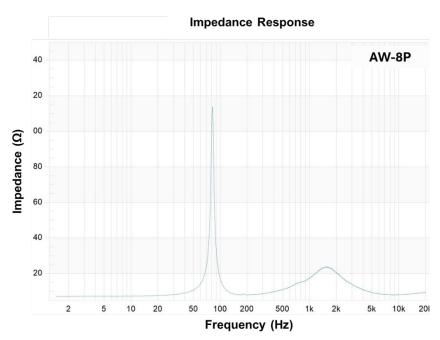


AW-8P - Polar Graphs

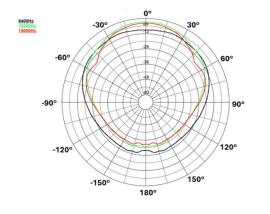

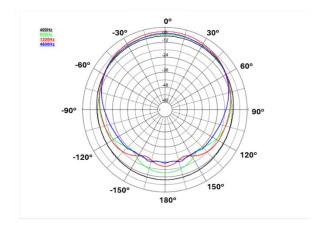

.



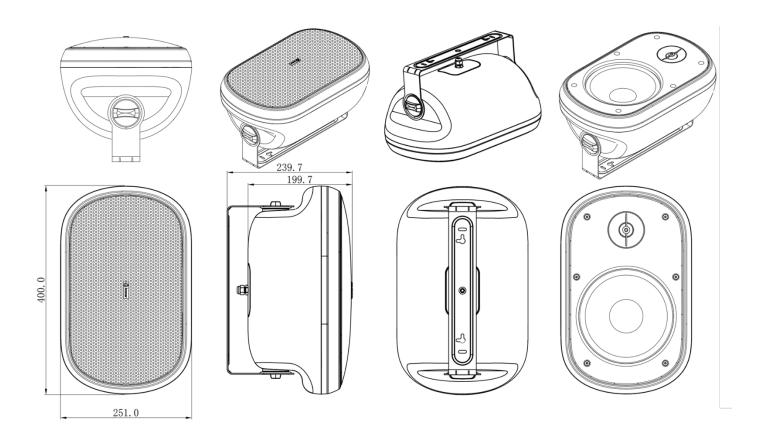













For the latest information on our products and a list of Kramer distributors, visit our website where updates to this user manual may be found.

We welcome your questions, comments, and feedback