# HDMI Extender (70m) with IR Control



User Manual

**VER 1.0** 

## Thank you for purchasing this product

For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

## Surge protection device recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shook, lighting strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

### **Table of Contents**

1. Introduction	
2. Features	
3. Package Contents	
4. Specifications	
5. Operation Controls and Functions	
5.1 Transmitter Panel	
5.2 Receiver Panel	
5.3 IR Pin Definition	
6. Application Example	

#### 1. Introduction

This HDMI Extender can extend high definition video/audio signal and IR control signal up to 230ft/70m for 1080p resolution, and 131ft/40m for 4K30 resolution via a single CAT6 cable, which can achieve zero-delay, uncompressed long-distance transmission between the transmitter and receiver. This extender with HDMI loop output can be cascaded to the next extender, supporting resolution up to 4K@30Hz. It supports EDID copy function (you can choose local or remote EDID). It supports audio formats up to PCM7.1, Dolby True HD, DTS HD. This product can be widely used in multimedia conference halls, TV teaching and large-screen displays.

#### 2. Features

- ☆ HDMI 1.4 and HDCP 1.4 compliant
- ☆ Support video resolution up to 4K@30Hz
- ☆ The maximum transmission distance via a single CAT6/5E cable is as follows:
  - CAT6: 230ft/70m for 1080p, 131ft/40m for 4K30 CAT5E: 197ft/60m for 1080p, 115ft/35m for 4K30
- ☆ Support copying EDID from receiver display or loop out display
- ☆ Allow for cascading via additional HDMI loop out port
- ☆ Compact design for easy and flexible installation

# 3. Package Contents

- ① 1 × HDMI Transmitter
- 2 1 × HDMI Receiver
- ③ 1 × IR Blaster Cable
- 4 1 × IR Receiver Cable
- ⑤ 2 × 5V/1A DC Power Adapter
- 6 1 × User Manual

# 4. Specifications

Technical	
HDMI Compliance	HDMI 1.4
	HDCP 1.4
Video Bandwidth	10.2Gbps
Video Resolution	Up to 4K@30Hz
Audio Support	Up to 7.1CH HD audio
Input TMDS Signal	3.3 volts
Input DDC Signal	5.0 volts/P-P
	Human Body model:
ESD Protection	+/- 8 kV (air-gap discharge)
	+/- 4 kV (contact discharge)

Connection		
Transmitter	Input: 1 x HDMI Type A [19-pin female] Outputs:1 x HDMI Type A [19-pin female] 1 x IR OUT [3.5mm Stereo Mini-jack] 1 x CAT OUT [RJ45, 8-pin female]	
Receiver	Inputs: 1x IR IN [3.5mm Stereo Mini-jack] 1x CAT IN [RJ45, 8-pin female] Output: 1x HDMI Type A [19-pin female]	
Mechanical		
Housing	Metal Enclosure	
Color	Black	
Dimensions	79.5mm[W] x 69mm[D] x 16.5mm[H]	
Weight	Transmitter: 132g, Receiver: 130g	
Power Supply	5V/1A DC	
Power Consumption	Transmitter: 1.86W, Receiver: 0.87W	
Operation Temperature	32 - 104°F / 0 - 40°C	
Storage temperature	-4 - 140°F / -20 - 60°C	
Relative Humidity	20 - 90% RH (no condensation)	

# 5. Operation Controls and Functions

#### 5.1 Transmitter Panel

Name








**Eunction Description** 

NO.	Ivaille	Function Description
1	HDMI IN	HDMI signal input port. Connect to HDMI source device such as DVD or Set-top box.
2	EDID DIP switch	The switch is used for selecting EDID: Switch to the right position, the extender will copy HDMI loop out display EDID information to signal source; Switch to the left position, the extender will copy Receiver display EDID to signal source.
3	HDMI OUT	HDMI signal loop out port. Connect to HDMI display device such as HDTV.
4	IR OUT	Connect to IR blaster cable, the IR signal is from the IR IN port of the receiver.
5	Power LED	When the transmitter is powered on, the LED will be on.
6	CAT	CAT output port. Connect to the CAT input port of the receiver with CAT5E/6 cable.

7		When the transmitter is connected to HDMI source, the LED will be on.
8	DC 5V	DC 5V power supply port.


#### 5.2 Receiver Panel




No.	Name	Function Description
1	HDMI OUT	HDMI signal output port. Connect to HDMI display device such as HDTV.
2	IR IN	Connect to IR receiver cable, the IR signal will emit to the IR OUT port of the transmitter.
3	Power LED	When the receiver is powered on, the LED will be on.
4	CAT	CAT input port. Connect to the CAT output port of the transmitter with CAT5E/6 cable.
5	Link LED	When the receiver is connected to HDMI source, the LED will be on.
6	DC 5V	DC 5V power supply port.

#### 5.3 IR Pin Definition

IR Receiver and Blaster pin's definition is as below:

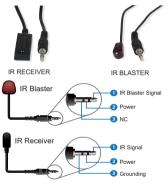

# 6. Application Example

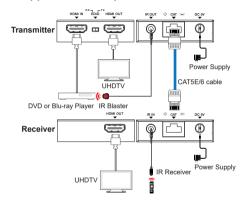



The terms HDMI and HDMI High-Definition Multimedia interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.